

## REMOVING - REFITTING : REAR SEAT (2/3 - 1/3)

**URGENT** : Observe the safety and cleanliness recommendations ⓘ .

### 1. Preliminary operation

Remove the luggage compartment carpet.

### 2. Removing

**N.B.** : The rear seat consists of a cushion and a seat back (2/3 - 1/3).

#### 2.1. Rear seat cushions (2/3 - 1/3)

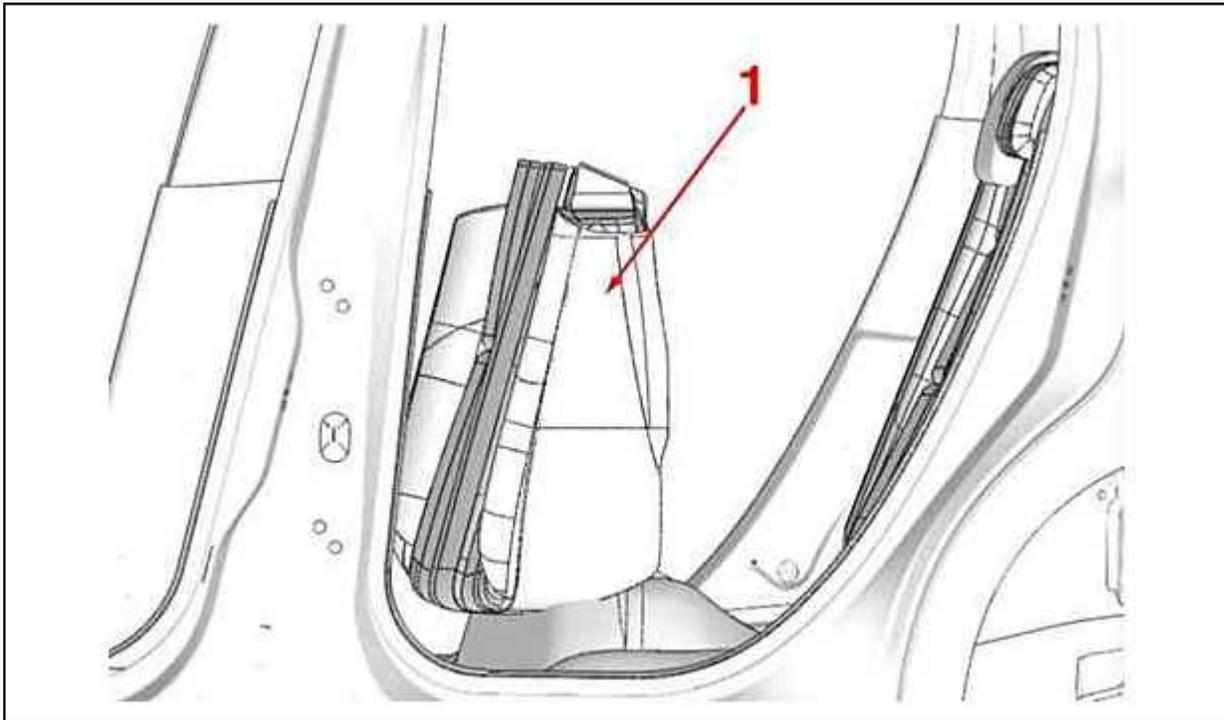


Figure : C5GK0XKD

Fold the rear seat cushions (1).

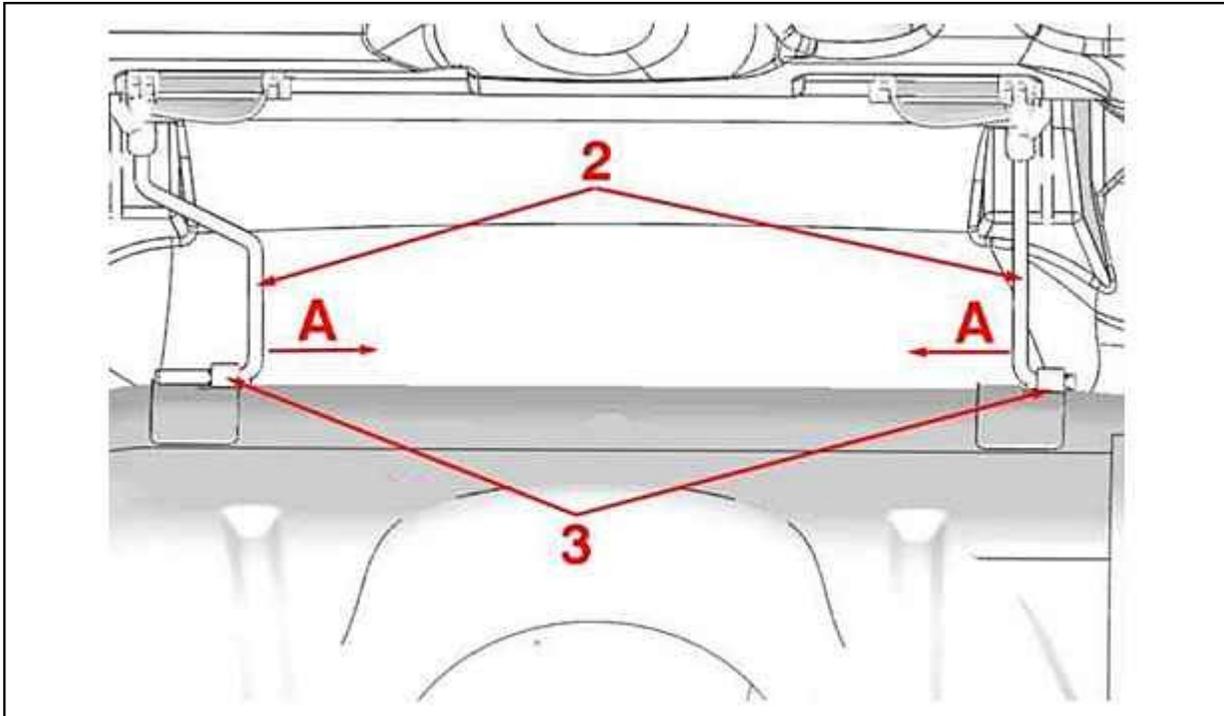


Figure : C5GK0XLD

Detach the hinge (2) (of each rear cushion) from the supports (3) by pushing in the direction of (A).

Remove : The rear seat cushions (1).

## 2.2. Rear seat backrest (2/3)

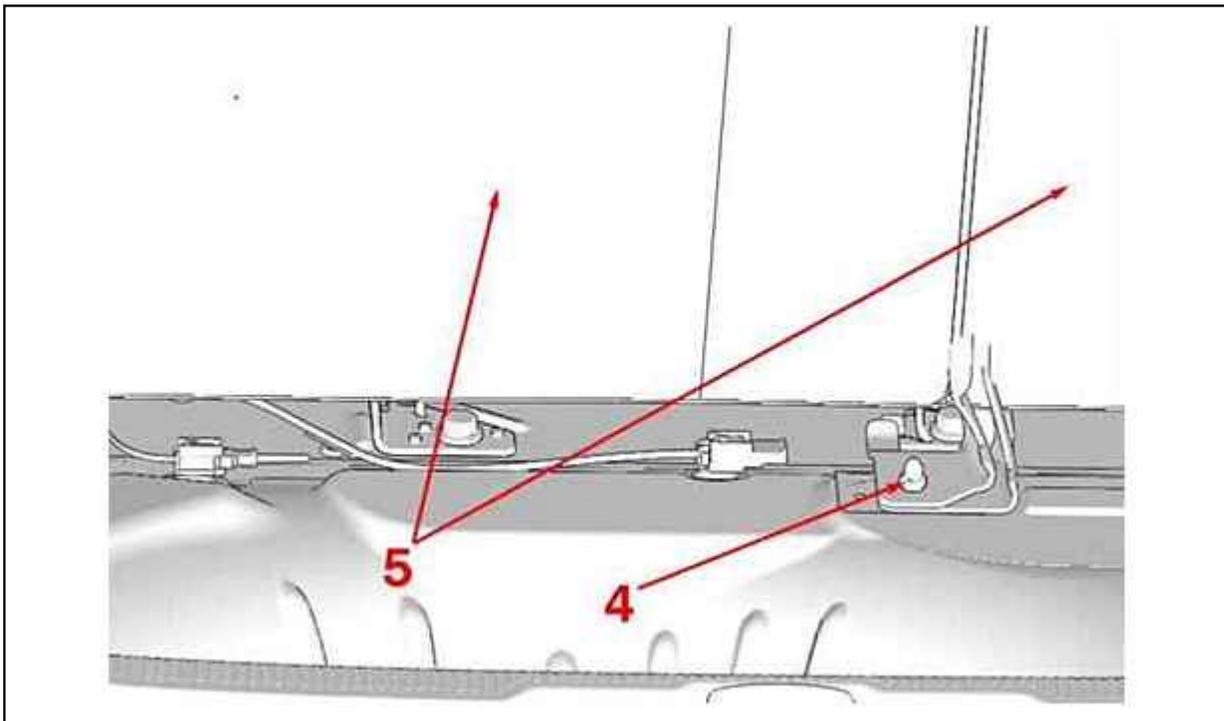


Figure : C5GK0XMD

Remove : The rear seat backs (4) nut (5).

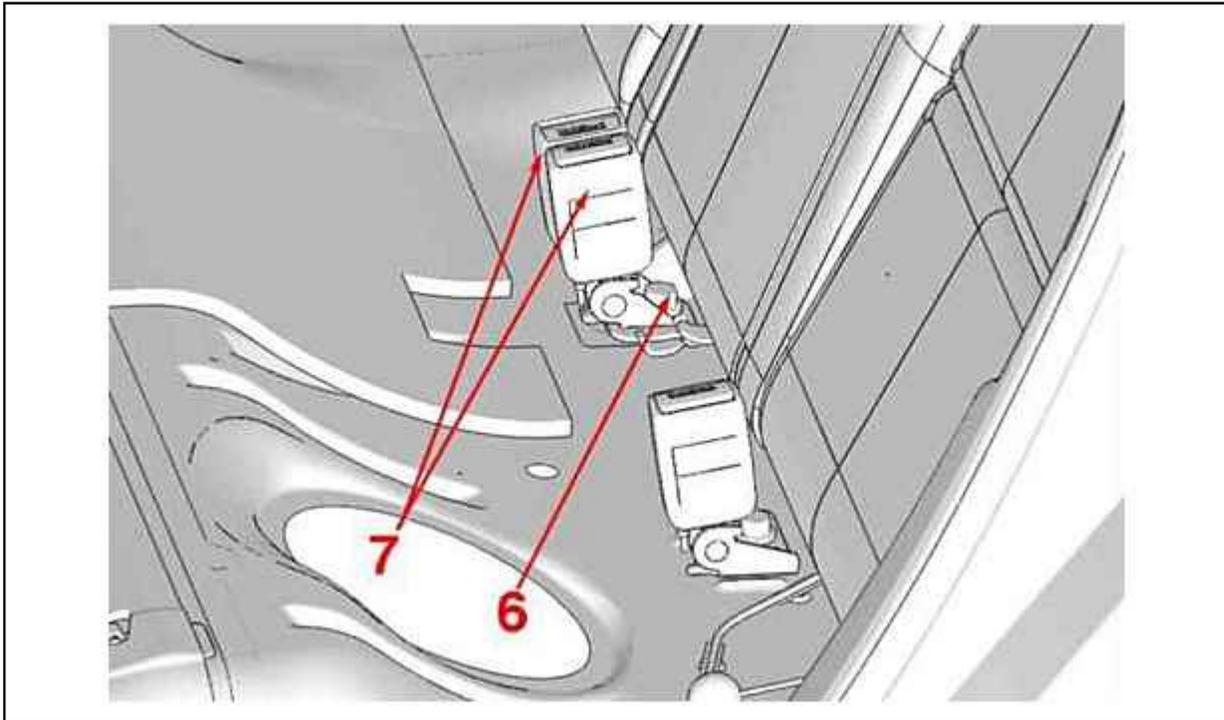


Figure : C5GK0XND

Remove the fastener (6).

Detach : The rear seat belt buckle straps (7).

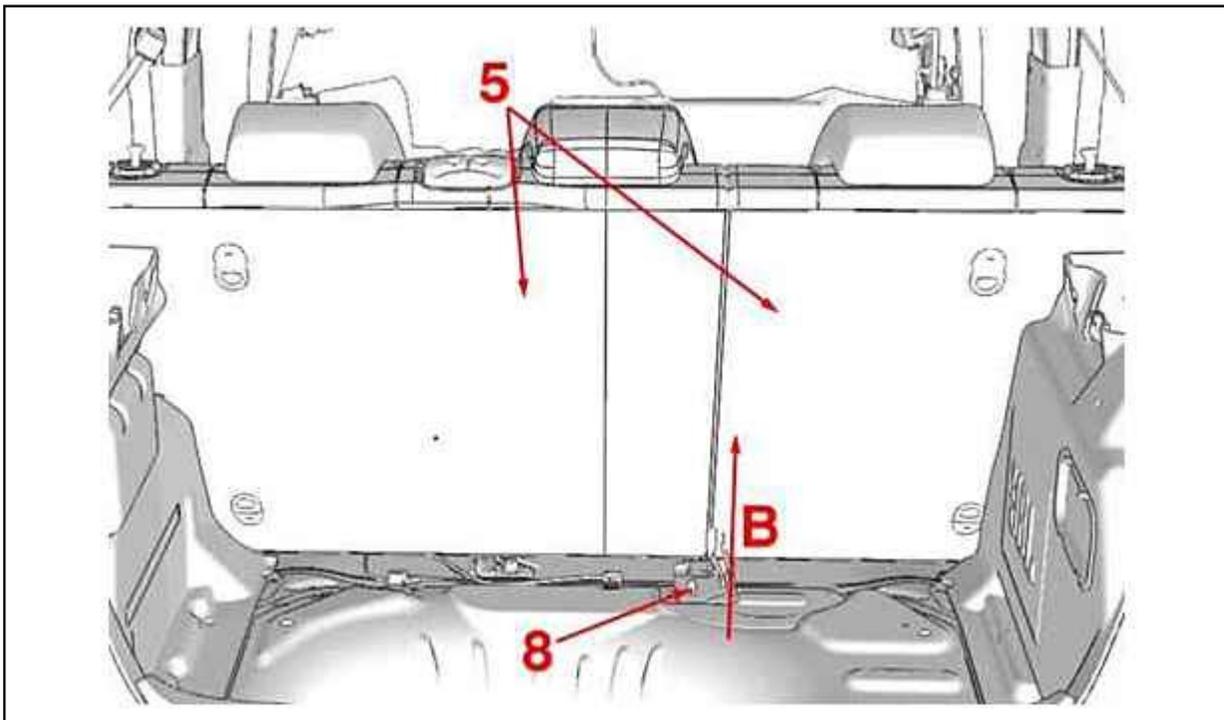


Figure : C5GK0XPD

Detach the rear seat backs (5) from the fixing shaft (8) (At "B").

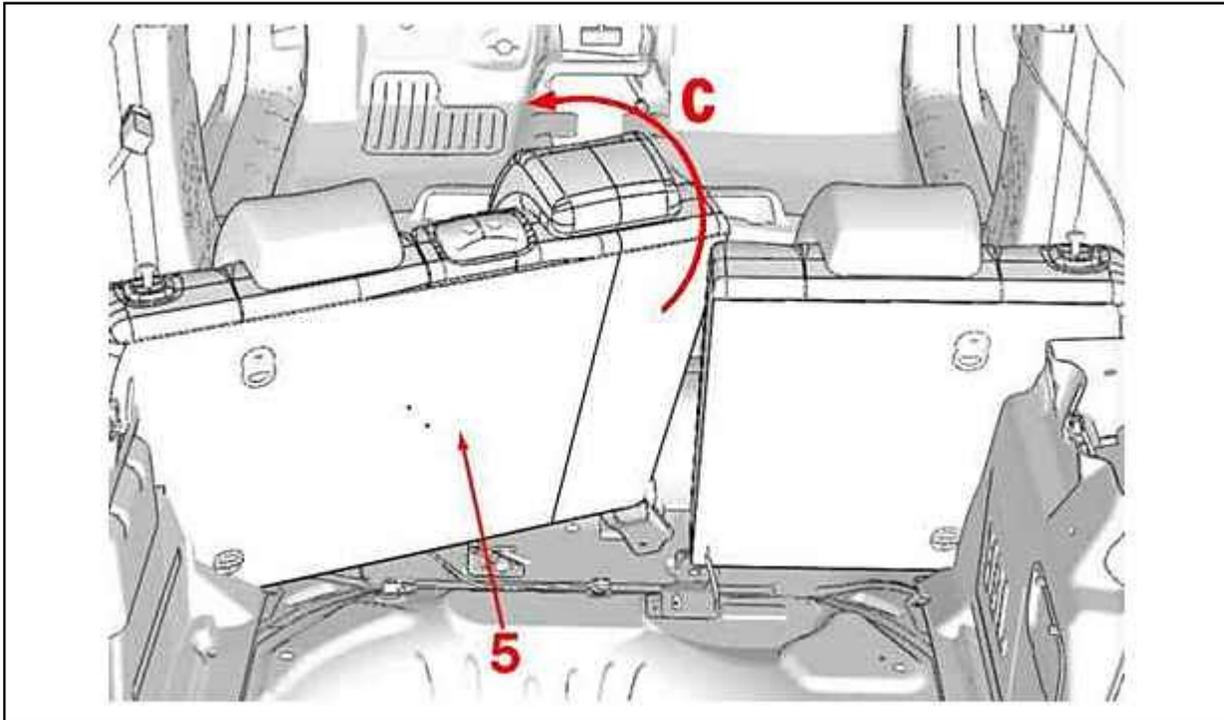


Figure : C5GK0XQD

Pivot the rear seat back (5) (At "C").

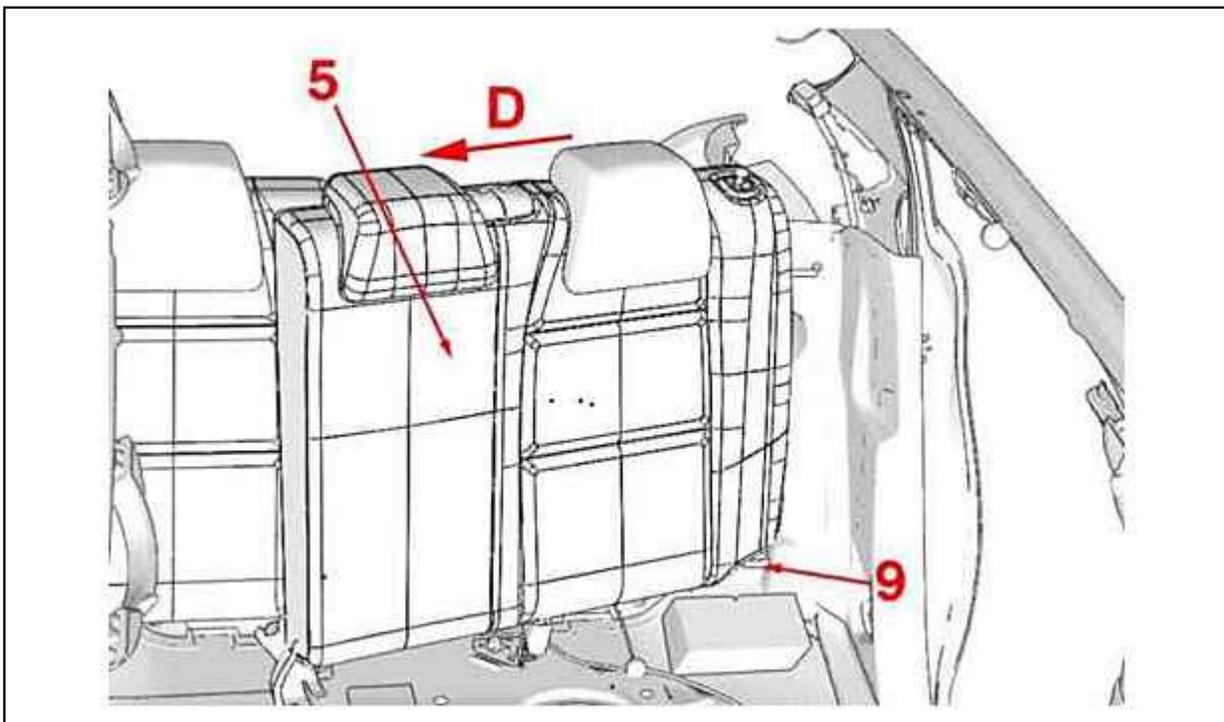


Figure : C5GK0XRD

Detach the rear seat backs (5) from the fixing shaft (9) (At "D").

Remove the rear seat backrest (5).

### **2.3. Rear seat backrest (1/3)**

Proceed in the same way as in the previous section (Opposite direction).

### **3. Refitting**

Proceed in the reverse order to removal.

**URGENT** : Adhere to the tightening torques.

Tighten the fixings (4), (6) to 3.0 mdaN.

Check the operation of the equipment.