

## REMOVING - REFITTING : REAR BRAKE CALIPERS

### VENTILATED FRONT DISCS/REAR DISCS

#### 1. Removing

Remove the rear wheels.

**Remove** ⓘ :Rear brake pads ⓘ .

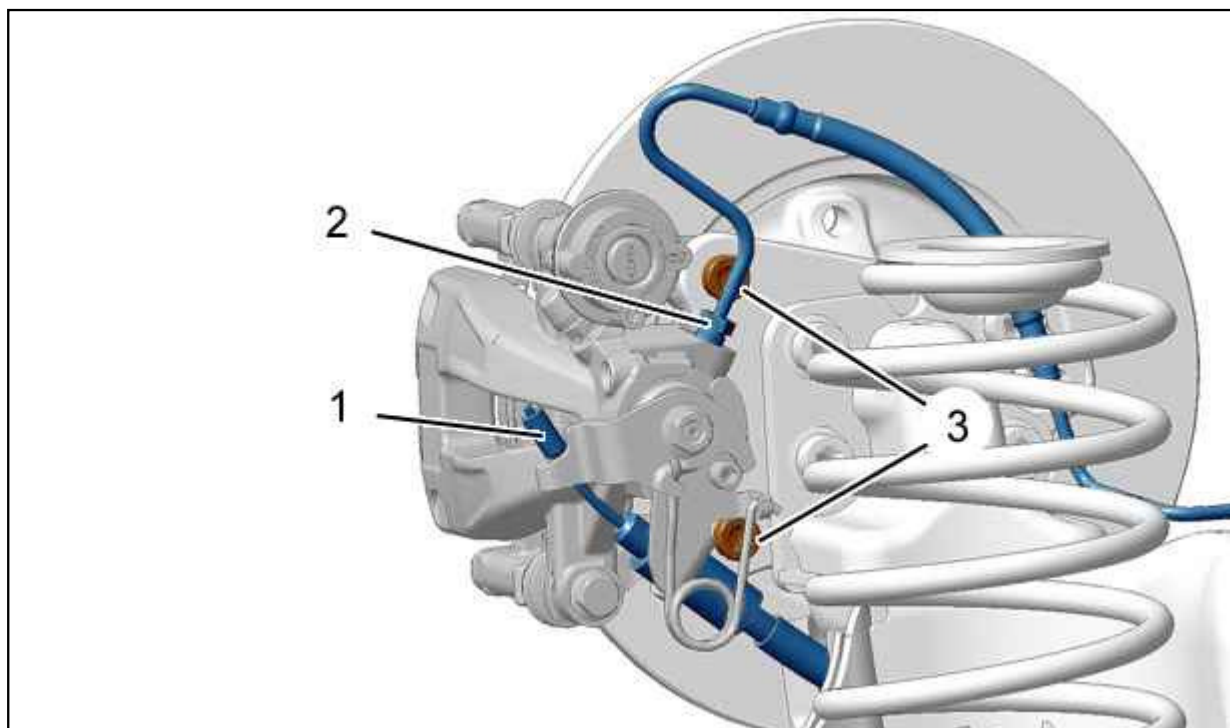


Figure : B3FP7RSD

Slacken the handbrake cables .

Uncouple the handbrake cable (1) from the lever .

Disconnect pipe (2).

Plug the brake pipe .

**CAUTION** : Plug the brake caliper opening.

Remove :

- The bolts (3)
- The brake caliper (/)

#### 2. Refitting

Refit the brake caliper.

**CAUTION** : Fit 2 new bolts (3) (coated with threadlock) ; Follow the order indicated.

Tighten the bolts (3) to  $5,3 \pm 0,7$  daN.m.

Reconnect the pipe (2) on the caliper ; Tightening torque to 1,5 da.Nm.

**Fit** ⓘ :Rear brake pads ⓘ .

Grease the location of the handbrake cable end piece (1) on the lever .

Couple the handbrake cable (1) to the lever .

**Fill and bleed the braking system** ⓘ .

Tighten the wheel bolts to  $9 \pm 1$  da.Nm.

**Adjust the parking brake** ⓘ .