

## REMOVING - REFITTING : INTERIOR TRIMS

### 1. Recommended tools

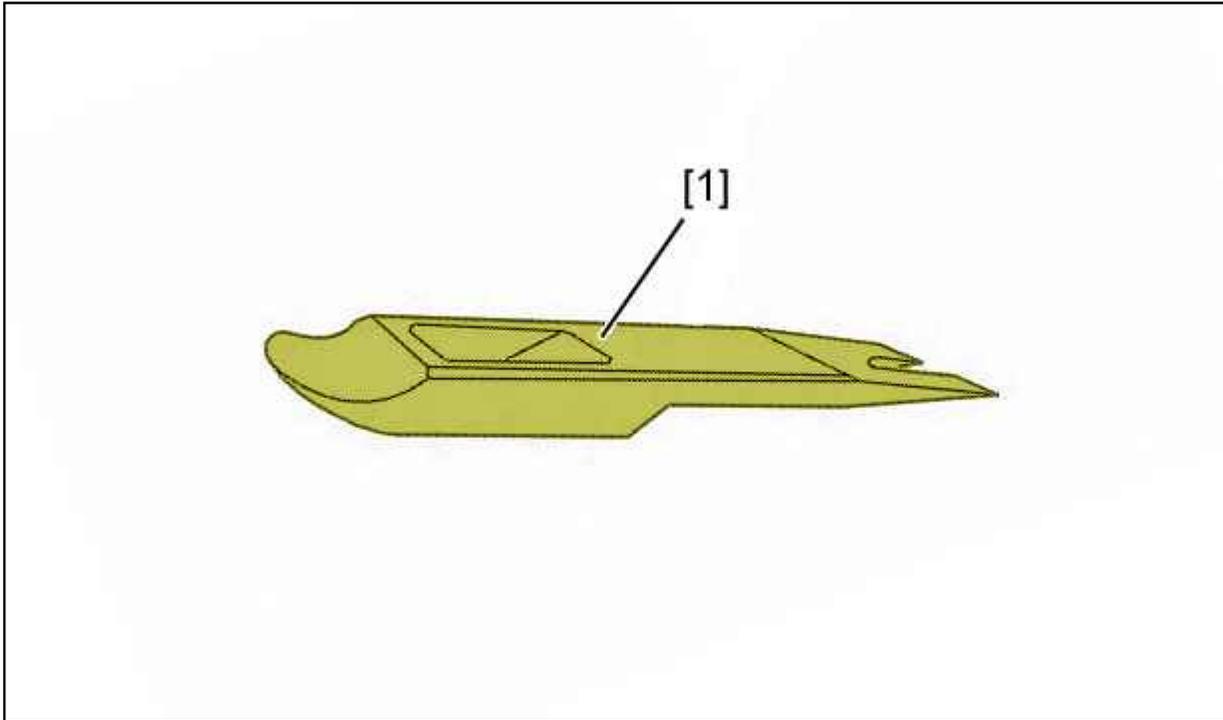


Figure : E5AP2R8D

[1] Unclipping lever (-).1330-E.

### 2. Removing

#### 2.1. On the left-hand side

Remove :

- **The front seat belt** ⓘ (Partially)
- **The rear seat belt** ⓘ (Partially)
- The rear parcel tray (/)
- The boot carpet
- The front door seal (Partially)
- The rear door seal (Partially)
- The boot aperture seal (Partially)

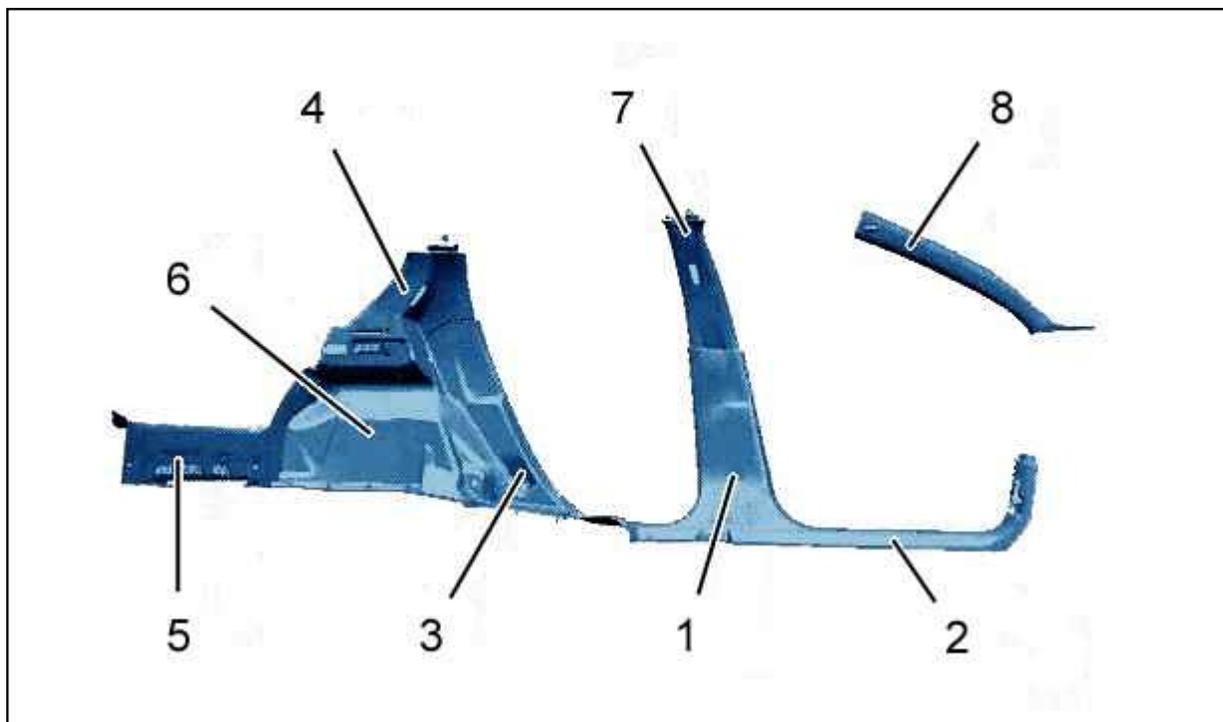


Figure : C5GP0KYD

Remove the interior trim components following the numbered order : From 1 to 8 ; Using tool [1].

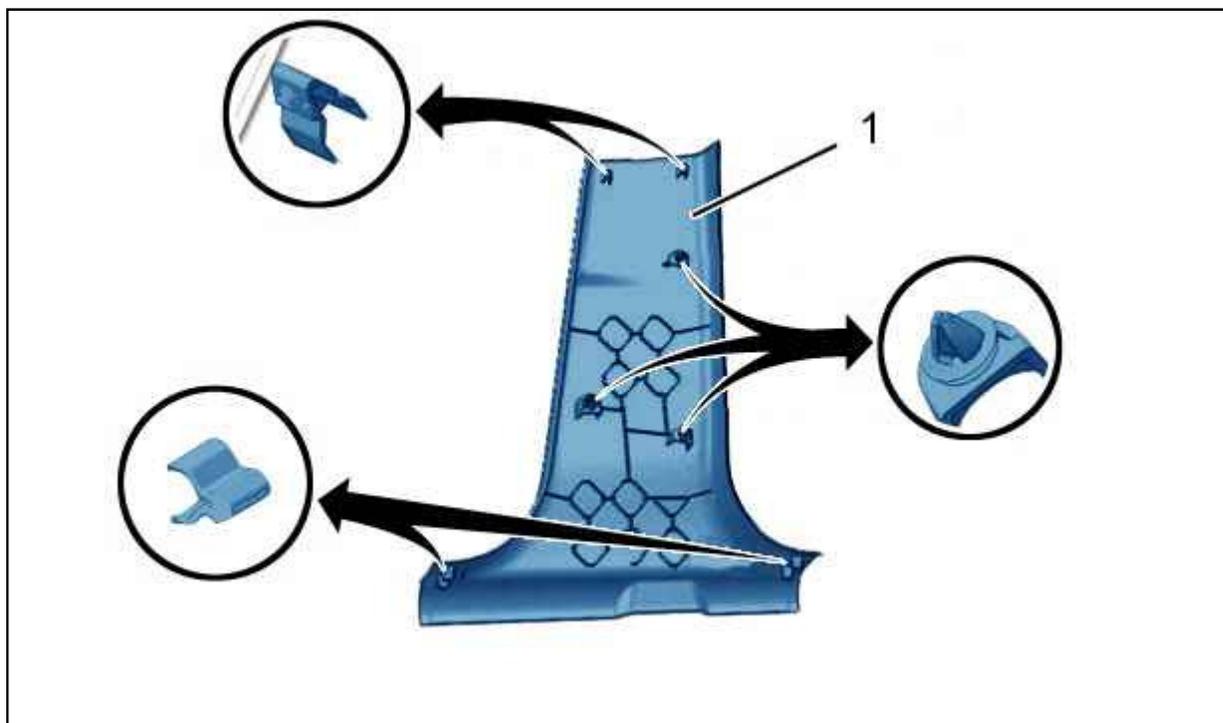


Figure : C5GP0KZD

Details of the fixing points of the component (1).

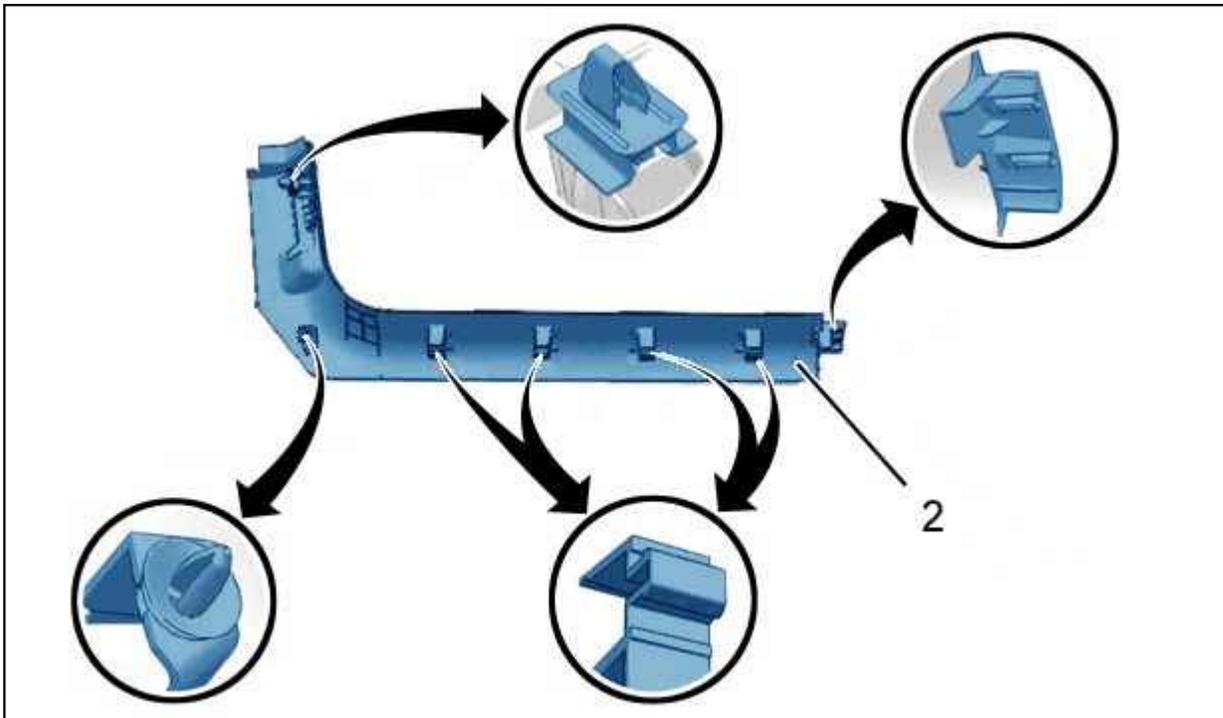


Figure : C5GP0L0D

Details of the fixing points of the component (2).

Side concerned :

- Raise the rear seat cushion
- Fold the rear seat back

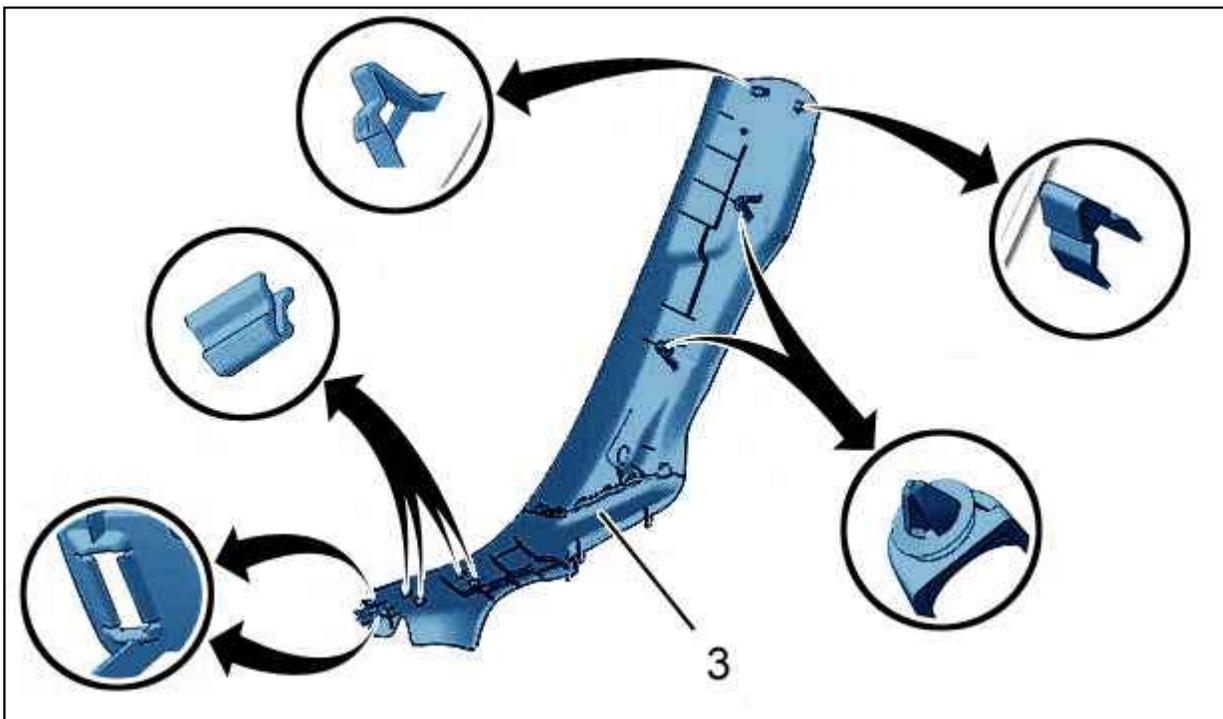


Figure : C5GP0L1D

Details of the fixing points of the component (3).

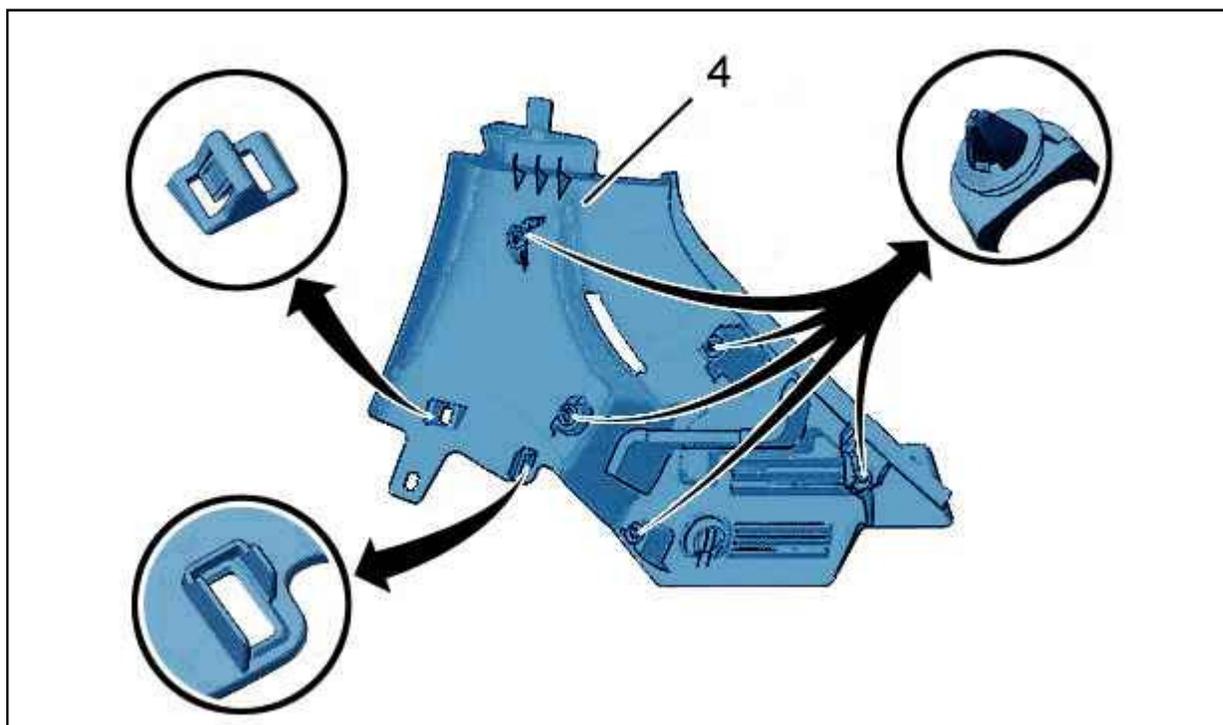


Figure : C5GP0L2D

Details of the fixing points of the component (4).

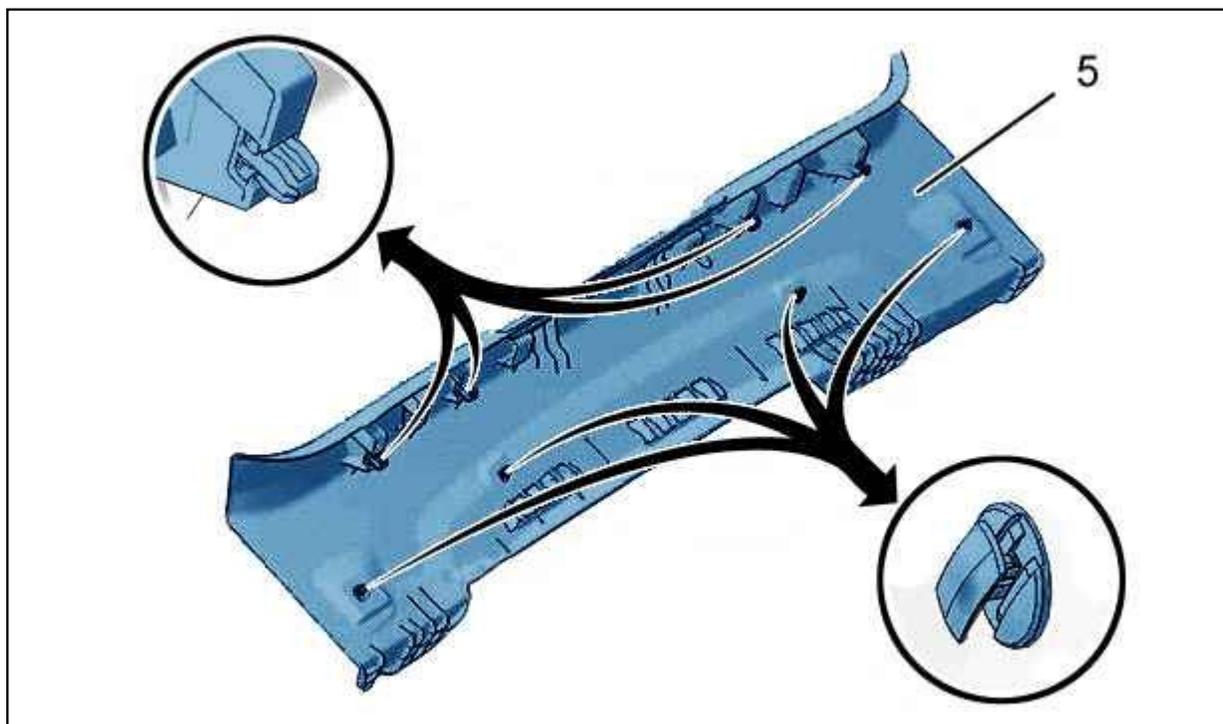


Figure : C5GP0L3D

Details of the fixing points of the component (5).

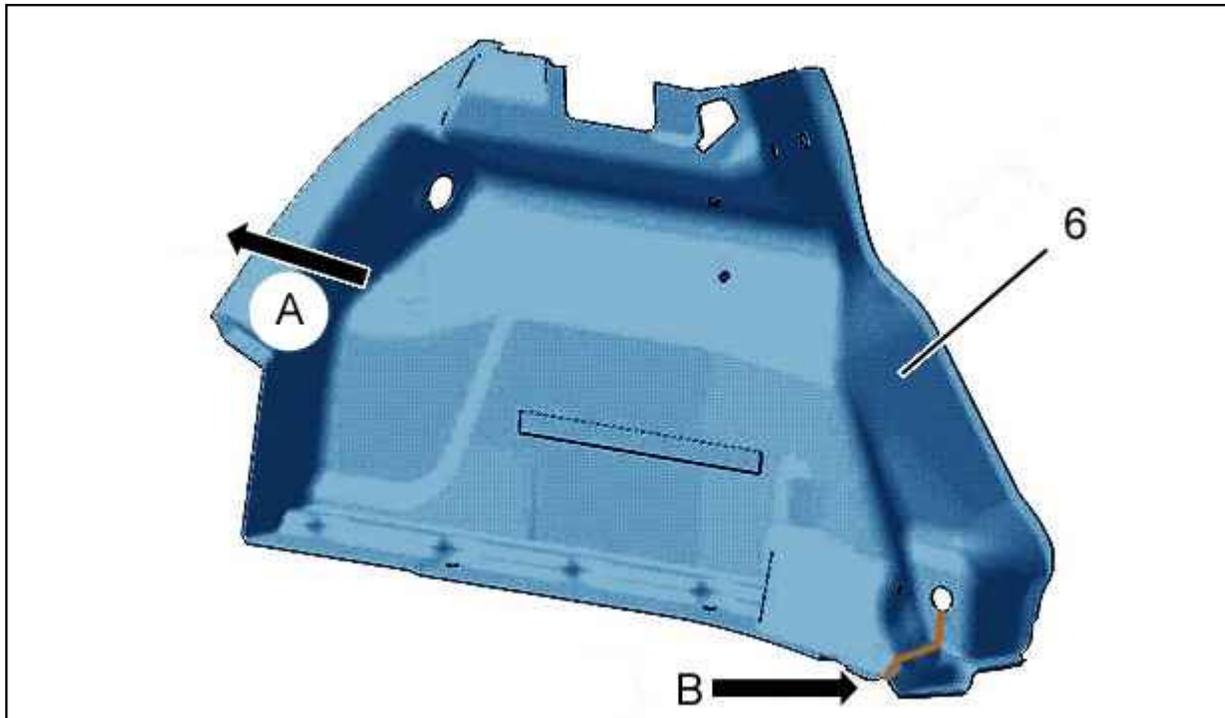


Figure : C5GP0L4D

Cut the rear boot side trim (6) (At "B") .  
Detach the rear boot side trim (6) (At "A") .

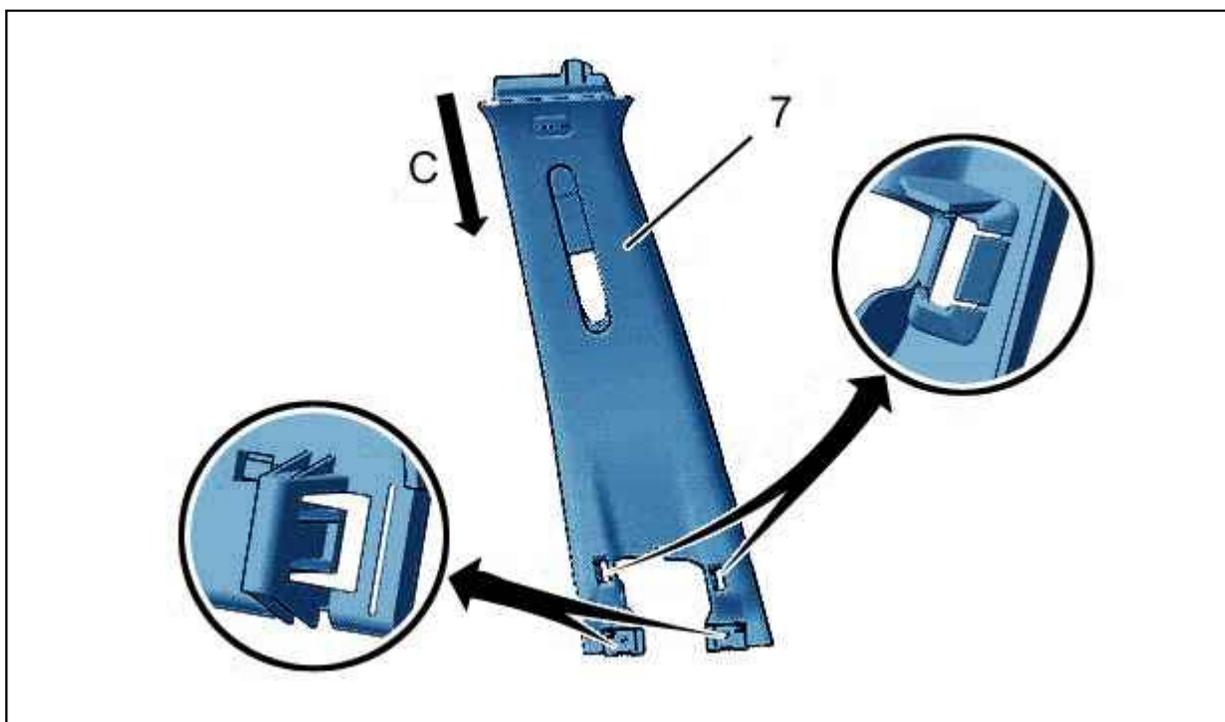


Figure : C5GP0L5D

Detach the centre pillar upper trim (7) (At "C") .

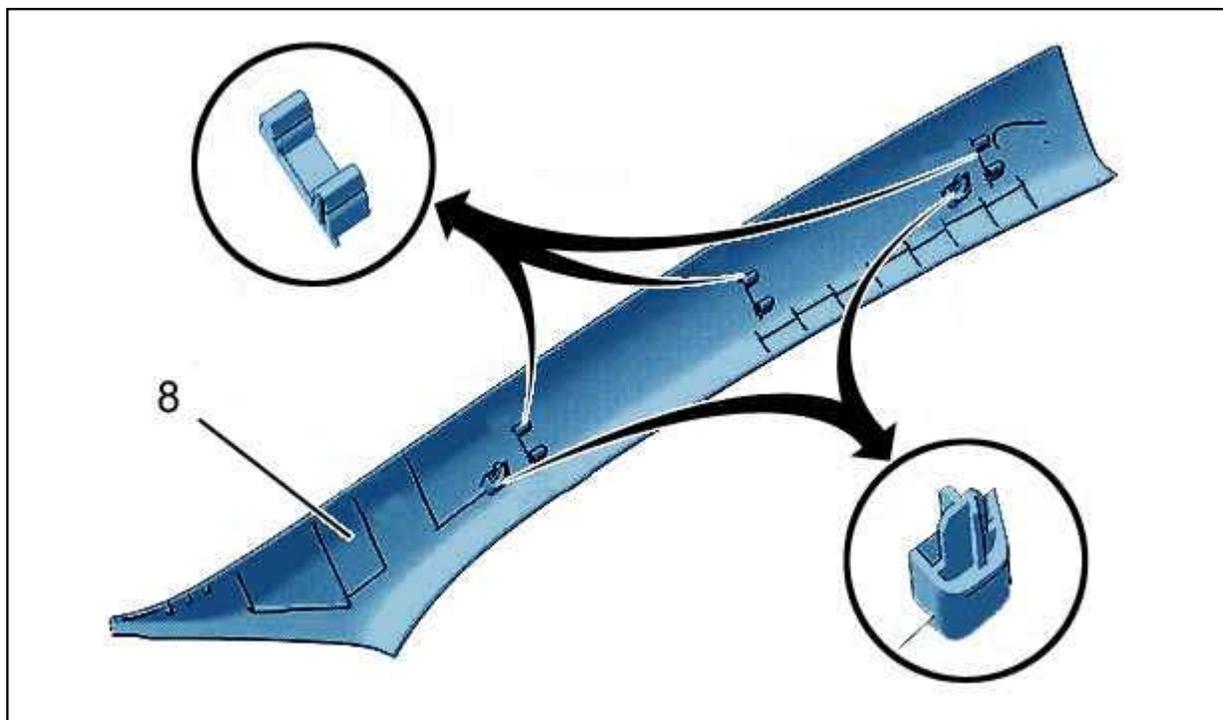


Figure : C5GP0L6D

Details of the fixing points of the component (8).

## 2.2. On the right-hand side

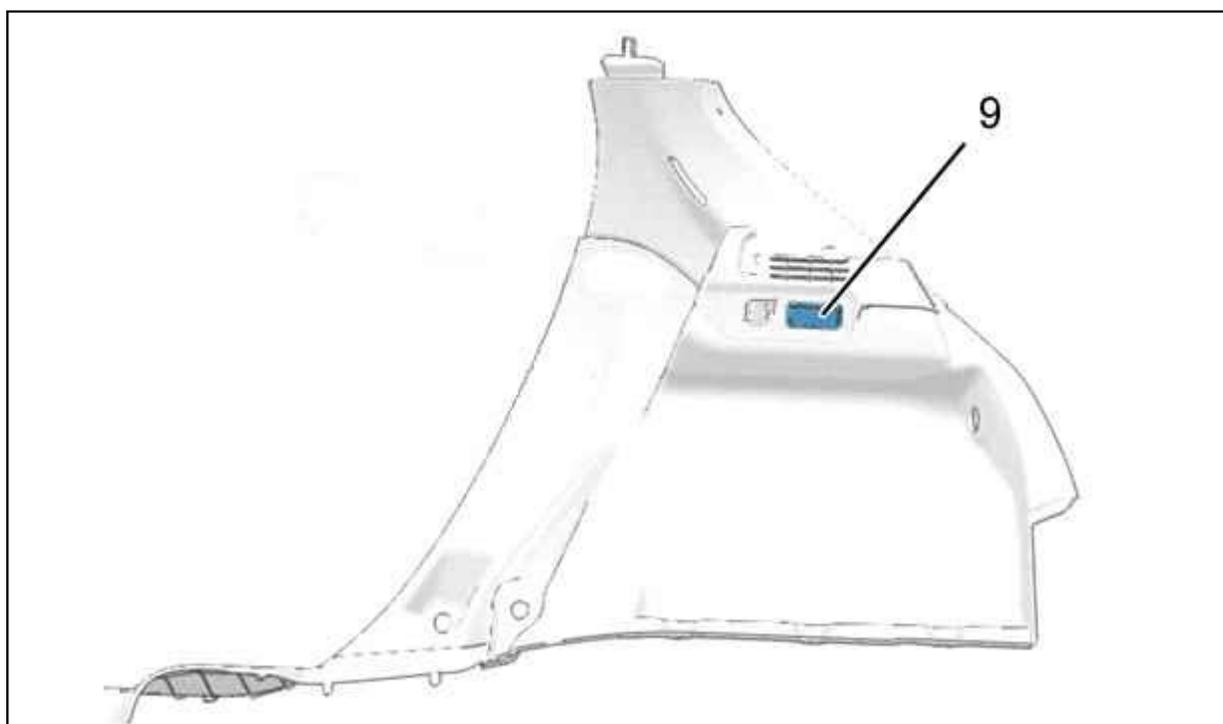


Figure : C5GP0L7D

Remove the boot light (9).

Continue the removal following the same operations as for the left-hand side.

### **3. Refitting**

Proceed in the reverse order to removal.