

STRIPPING-ASSEMBLING : REAR SEAT

URGENT : Observe the safety and cleanliness recommendations ⓘ .

1. Stripping

Remove the rear seats ⓘ .

1.1. Rear seat cushion 2/3

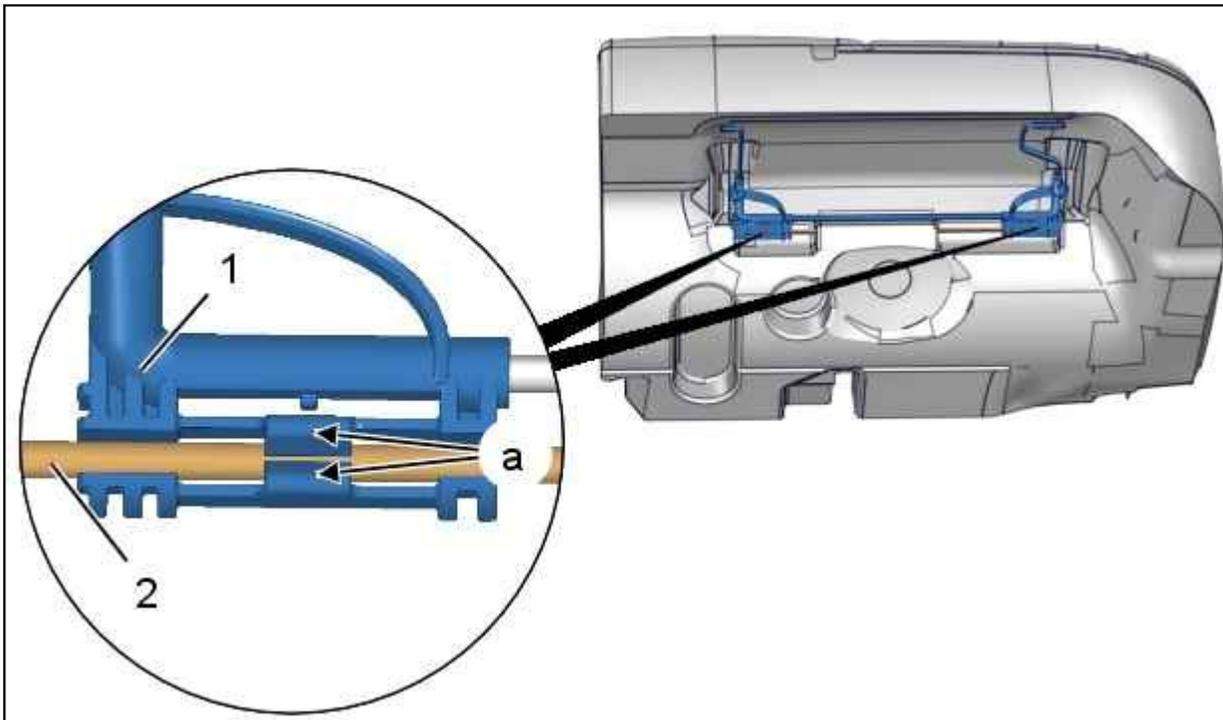


Figure : C5GS0FHD

Unclip the hinge brackets (1) from the shaft (2) (as "a") ; By means of a screwdriver.
Remove the hinge (1).

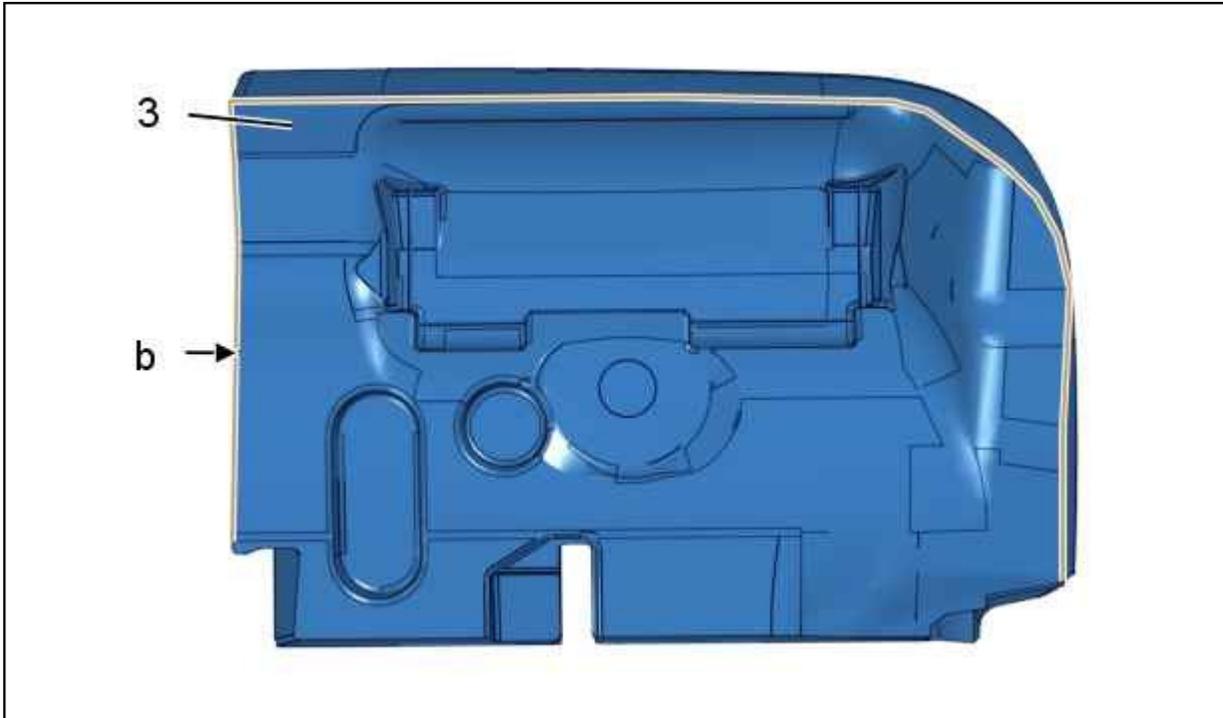


Figure : C5GS0FID

Undo the zip fastening on the seat (at "b"), to release the covered seat cushion (3).

Remove :

- The trimmed seat squab cushion (3)
- The seat frame

1.2. Rear seat cushion 1/3

Strip the rear seat cushion 1/3 following the same procedure as for the rear seat cushion2/3.

1.3. Rear seat backrest2/3

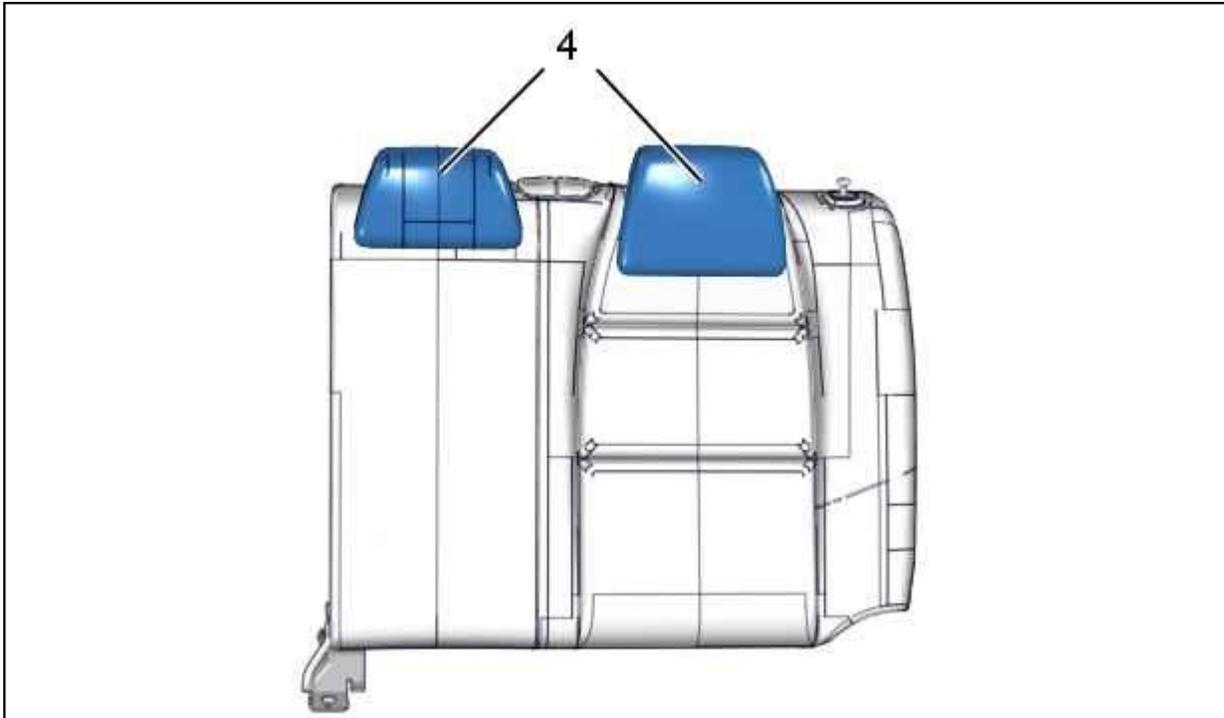


Figure : C5GS0FJD

Remove the head restraints (4).

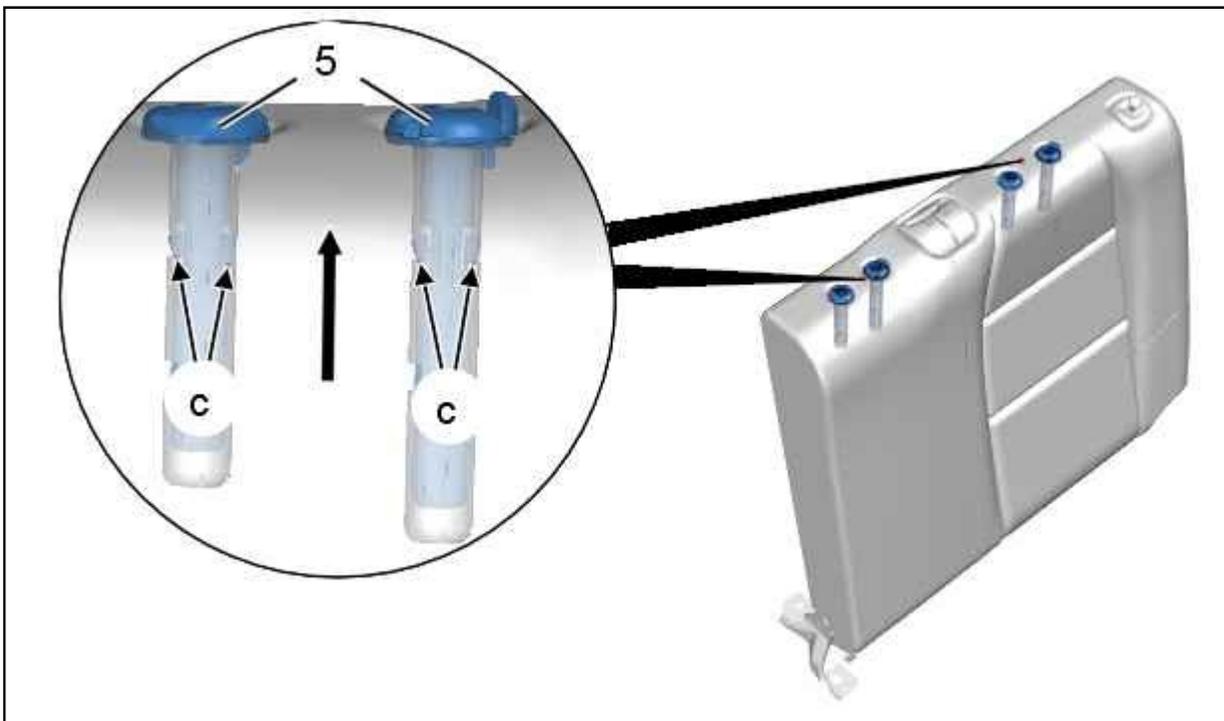


Figure : C5GS0FKD

Unclip : The guides (5) for the head restraints (4) (as "c") ; By means of a screwdriver.

Detach : The guides (5) for the head restraints (4) (Following the arrow).

Remove : The guides (5) for the head restraints (4).

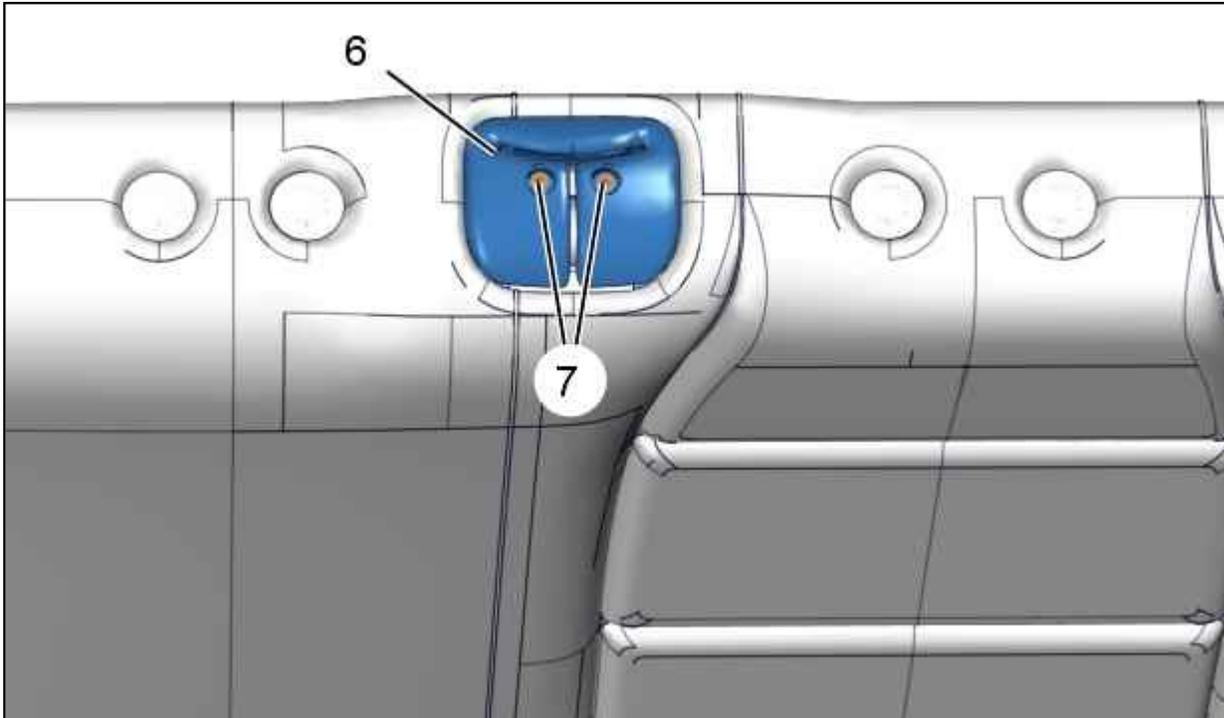


Figure : C5GS0FLD

Remove the bolts (7).
Remove the seat belt trim (6).

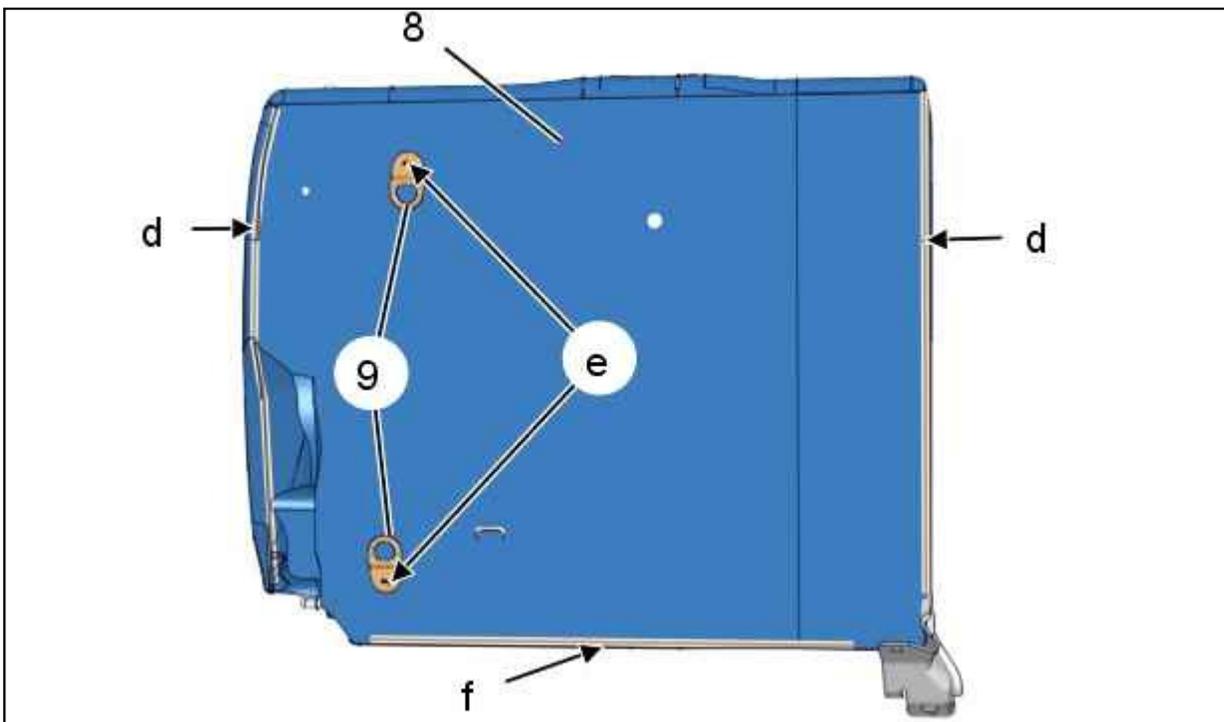


Figure : C5GS0FMD

Action the zip of the covered backrest cushion (8) (as "d").
Unclip : The trimmed seatback cushion (8) (as "f").

Unclip the hooks (9) (as "e").
Remove the hooks (9).



Figure : C5GS0FPD

Detach the covered backrest cushion (8) from the backrest release control (10).
Remove the covered backrest cushion (8).

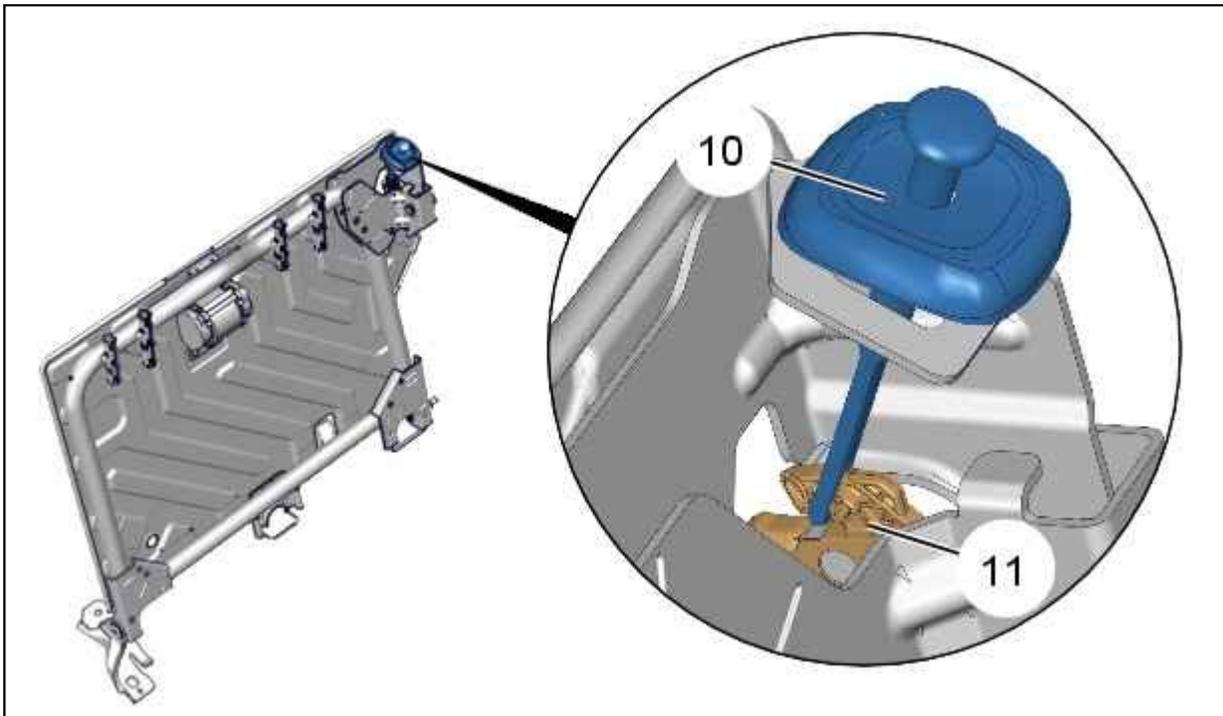


Figure : C5GS0FQD

Detach the backrest release control (10) from the locking mechanism (11).
Remove : The seat back unlock control (10).

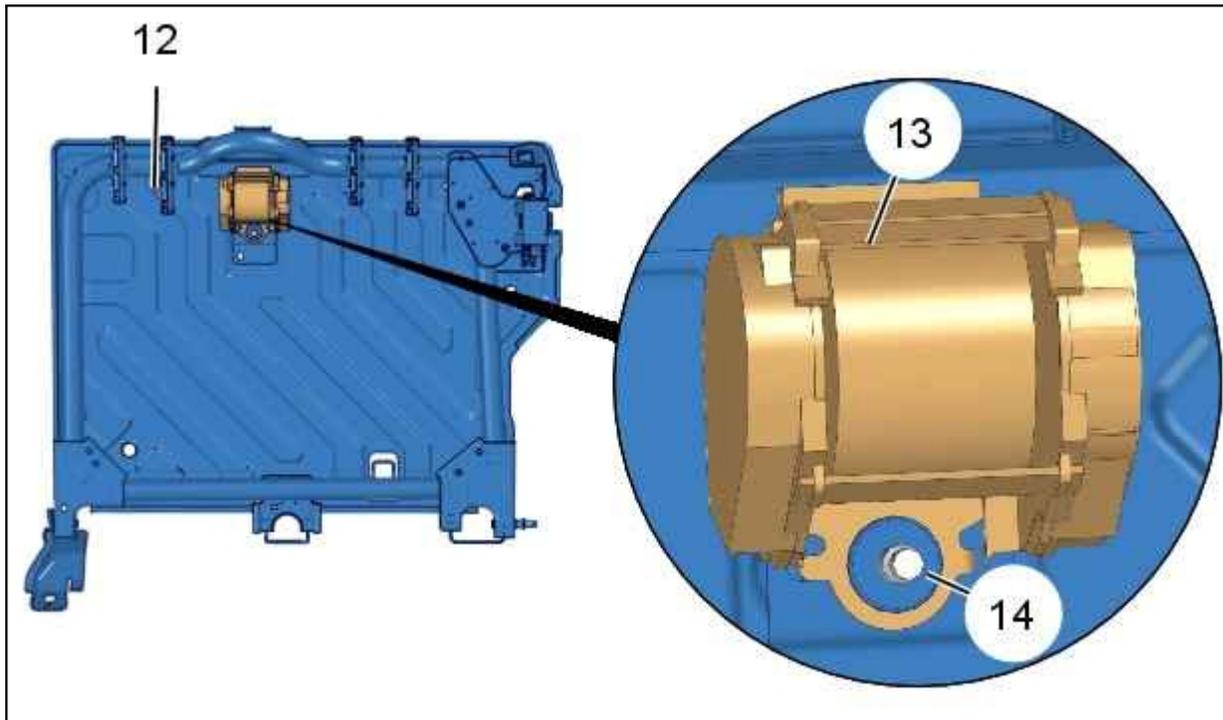


Figure : C5GS0FRD

Remove the screw (14) from the rear central seat belt winder (13).
Remove the reel (13) of the central rear seat belt.
Remove : The backrest frame (12).

N.B. : When replacing the backrest frame (12) for police vehicles, use the old backrest frame as a drilling template for fixing the support for the police electrical control unit.

1.4. Rear seat backrest1/3

Strip the rear seat backrest 1/3 following the same procedure as for the rear seat backrest 2/3.

2. Re-assembling

Proceed in the reverse order to removal.
Tighten the bolt (14) to 2.5 daN.m.
Check the operation of the equipment.