

REMOVING - REFITTING : PROTECTIVE ENGINE SHIELD

1. Removing

Place the vehicle on a 2 -post lift.

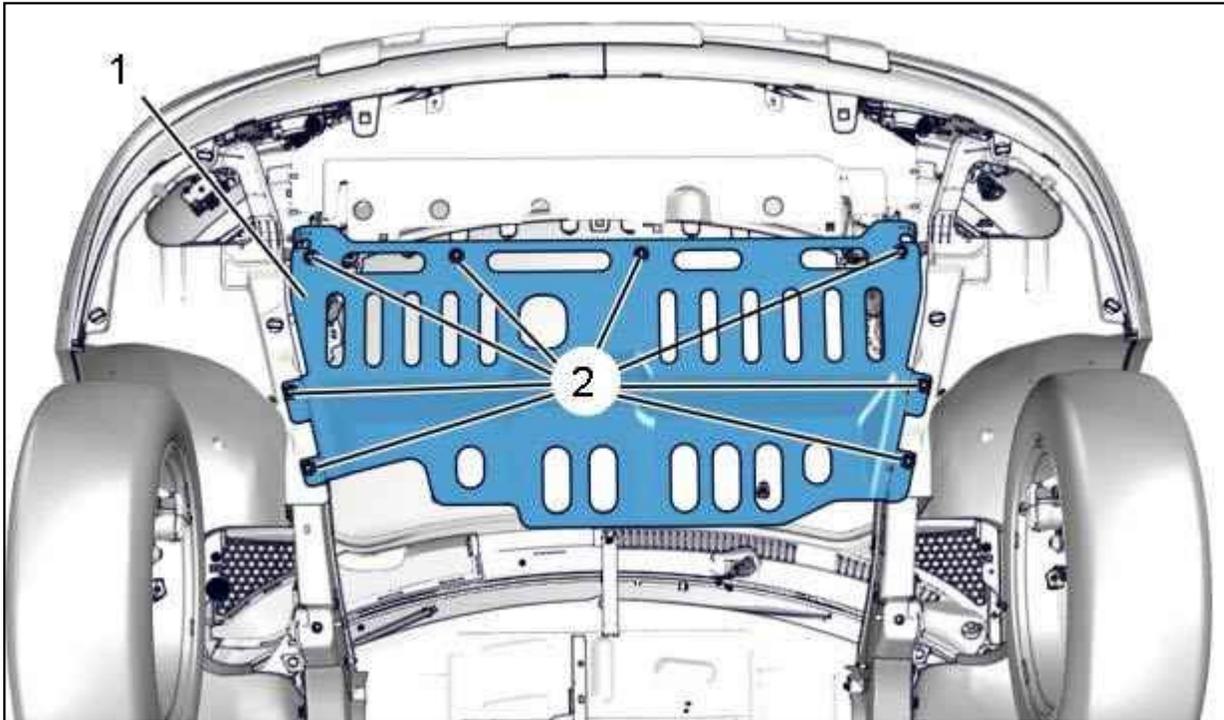


Figure : C5JM014D

Remove :

- The bolts (1)
- The protective panel under the engine (2)

2. Refitting

Proceed in the reverse order to removal.