

## REMOVING - REFITTING : HEADLINING (PANORAMIC ROOF )

*WITH ROOF WINDOW*

### 1. Recommended tools

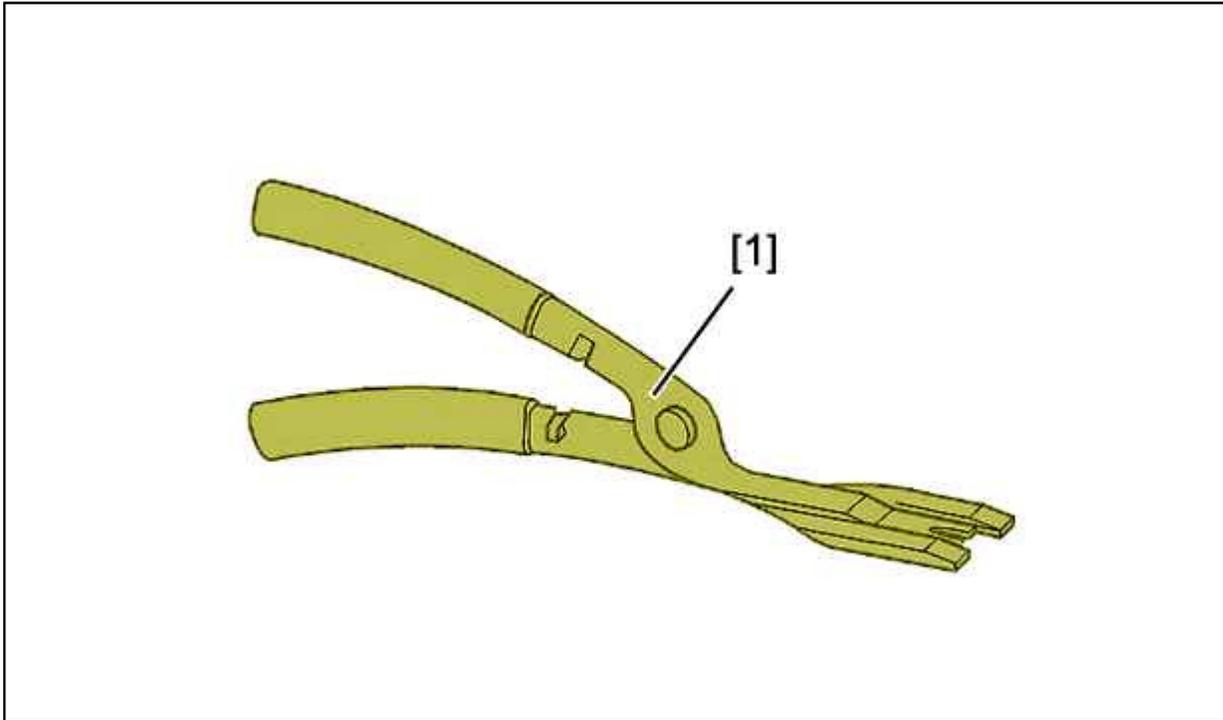


Figure : E5AP2RXD

[1] Trim pliers (-).1311.

### 2. Removing

Remove :

- **The quarter light surround (/) (i)**
- **The windscreen pillar trim (i) (Partially (i))**
- The rear light (According to equipment)

Dislodge the upper parts of the front/rear door seals and of the boot seal .

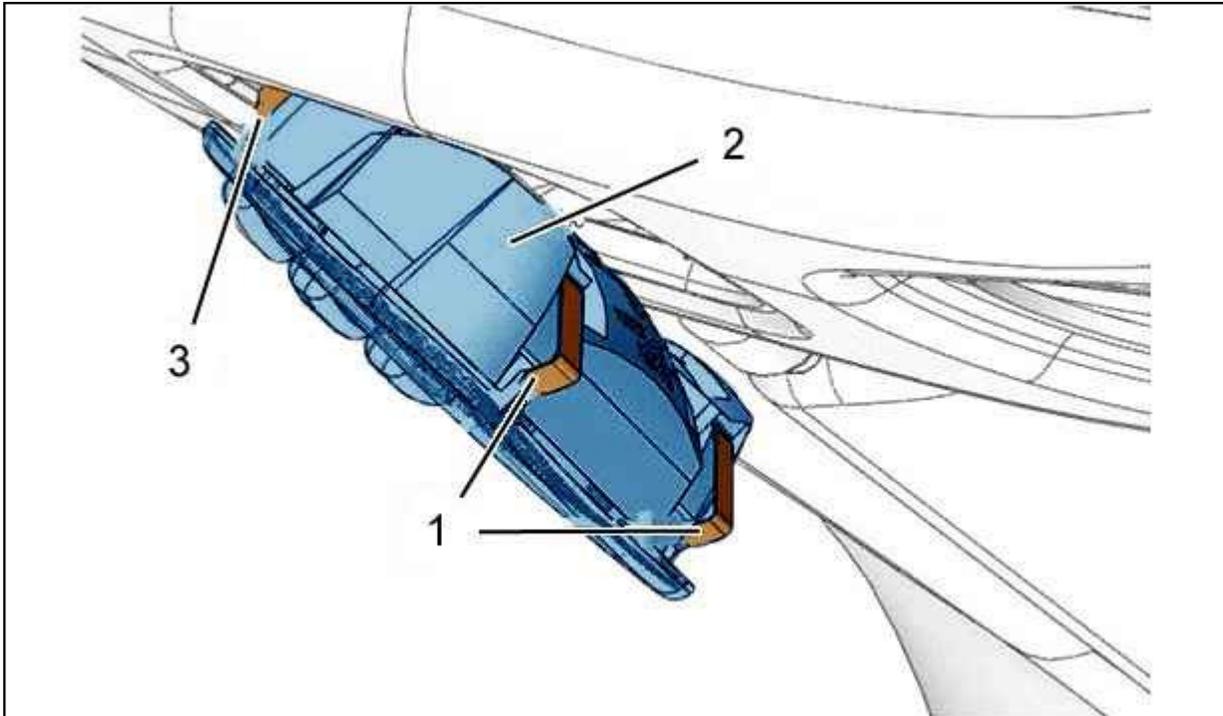


Figure : C4DP08VD

Unclip the retaining springs (1).  
Detach the light (2) rearwards to release the front retaining lugs (3).

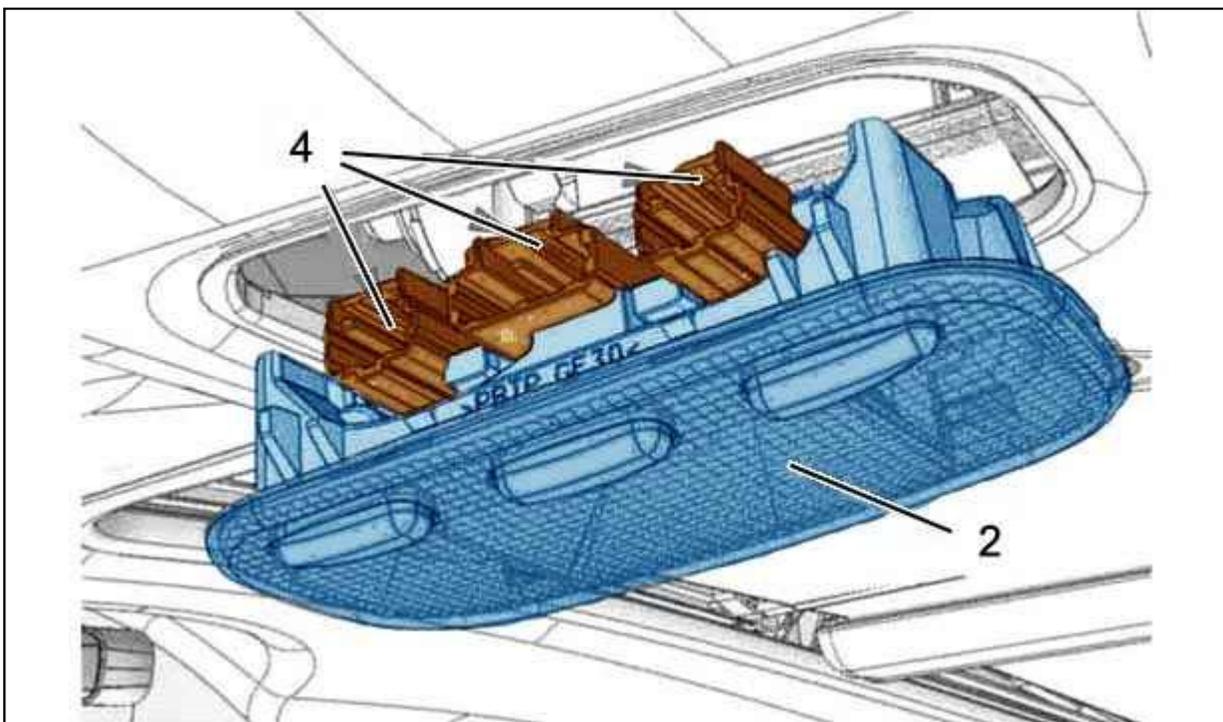


Figure : C4DP08WD

Disconnect the connectors (4) (According to equipment).  
Remove the light (2).

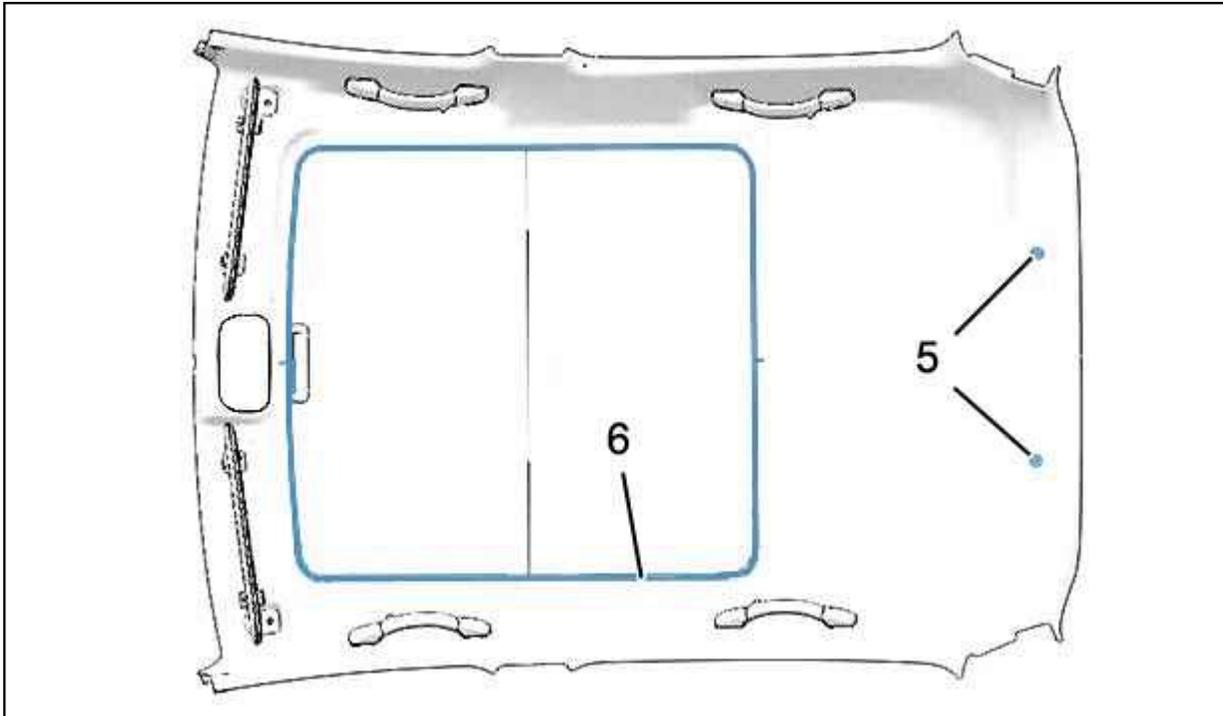


Figure : C5GP0KKD

Unclip the clips (5) ; Using tool [1].  
Remove the seal (6).

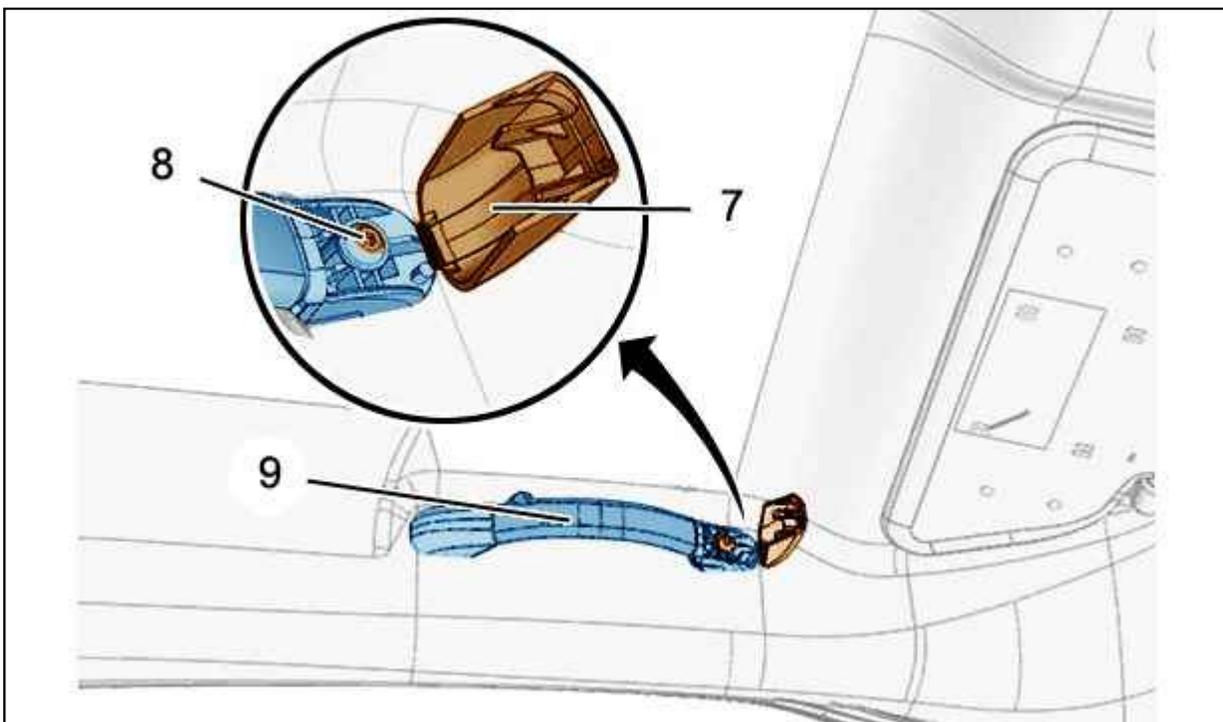


Figure : C4DP08XD

Unclip the hinged cover (7) (Symmetrical operation(s)).  
Remove bolts (8) (Symmetrical operation(s)).

Remove the grab handle (5).  
Carry out the same operations for the other handles.

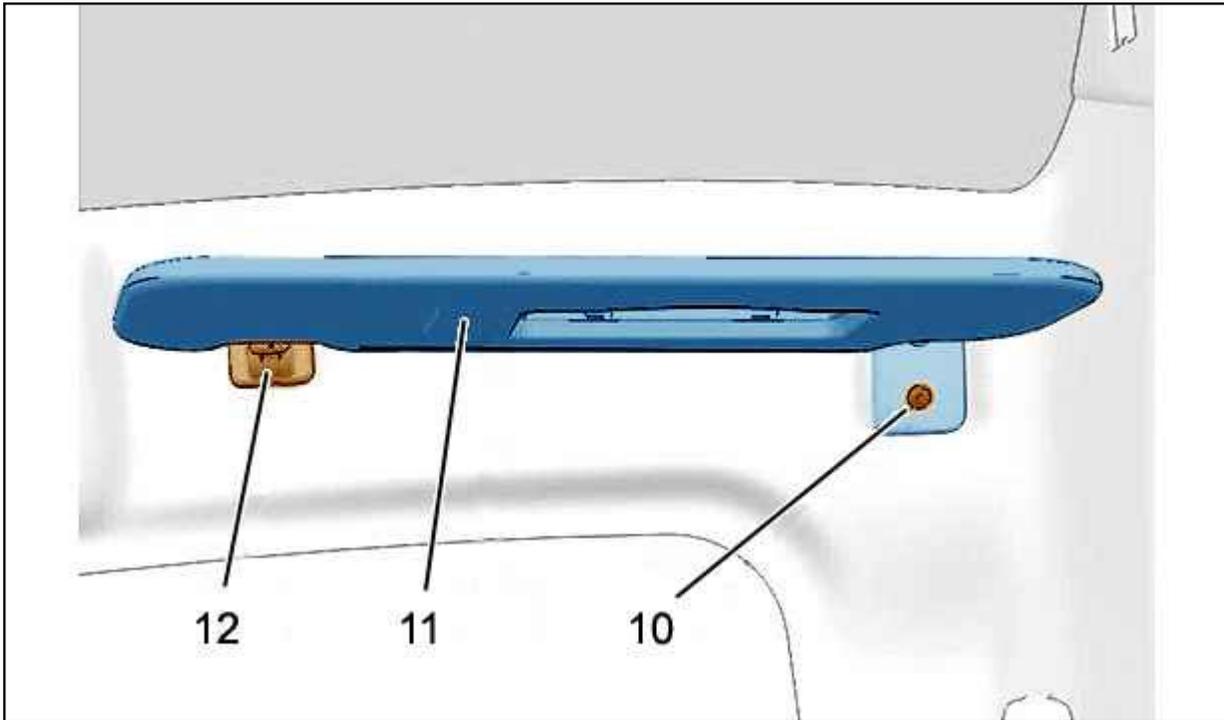


Figure : C5GP0KLD

Remove bolts (10).  
Disengage the sun visor (11) from the hook (12).  
Remove the blind (11) (\*).

**N.B. :** (\*) With or without the electrical harness (According to equipment).

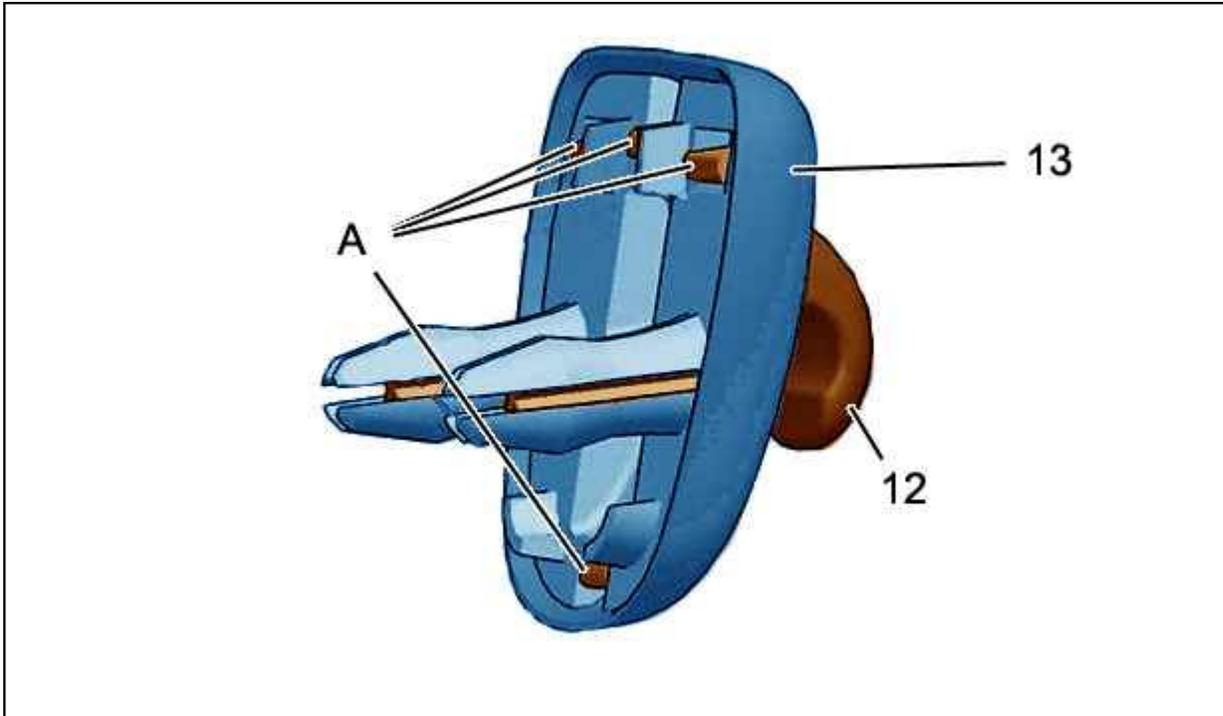


Figure : C5GP0KMD

Unclip (at " A ") the sun visor retaining hook lock (13) ( each side).  
Remove the sun visor retaining hook (12) ( each side).

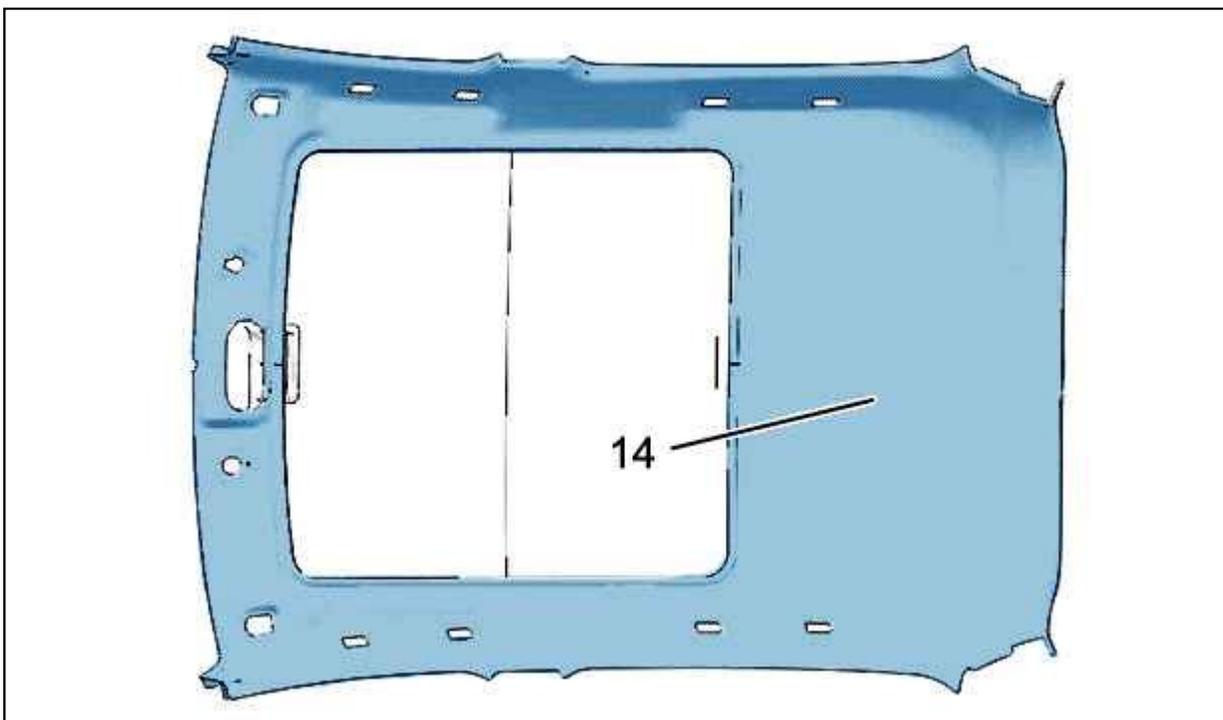


Figure : C5GP0KND

Remove the headlining (14) via the vehicle boot.  
Remove the headlining (14).

### **3. Refitting**

Proceed in the reverse order to removal.

Tighten :

- The screw (8) to 0.5 m.daN
- The screw (10) to 0.2 m.daN

Check that the electrical equipment operates correctly.