

REMOVING - REFITTING : HEADLAMP

1. Removing

Disconnect the battery.

Remove the front bumper .

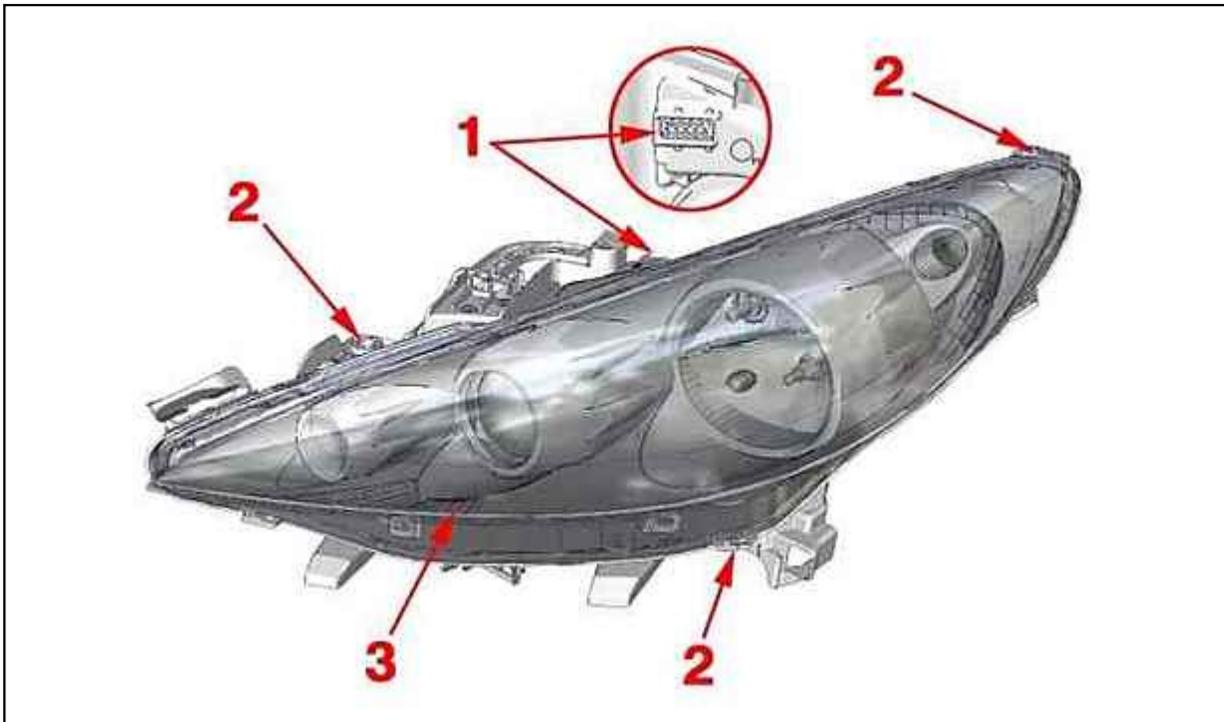


Figure : C5EK04TD

Disconnect the connector (1) (9-way - Black).

Remove :

- The 3 bolts (2)
- Headlamp (3)

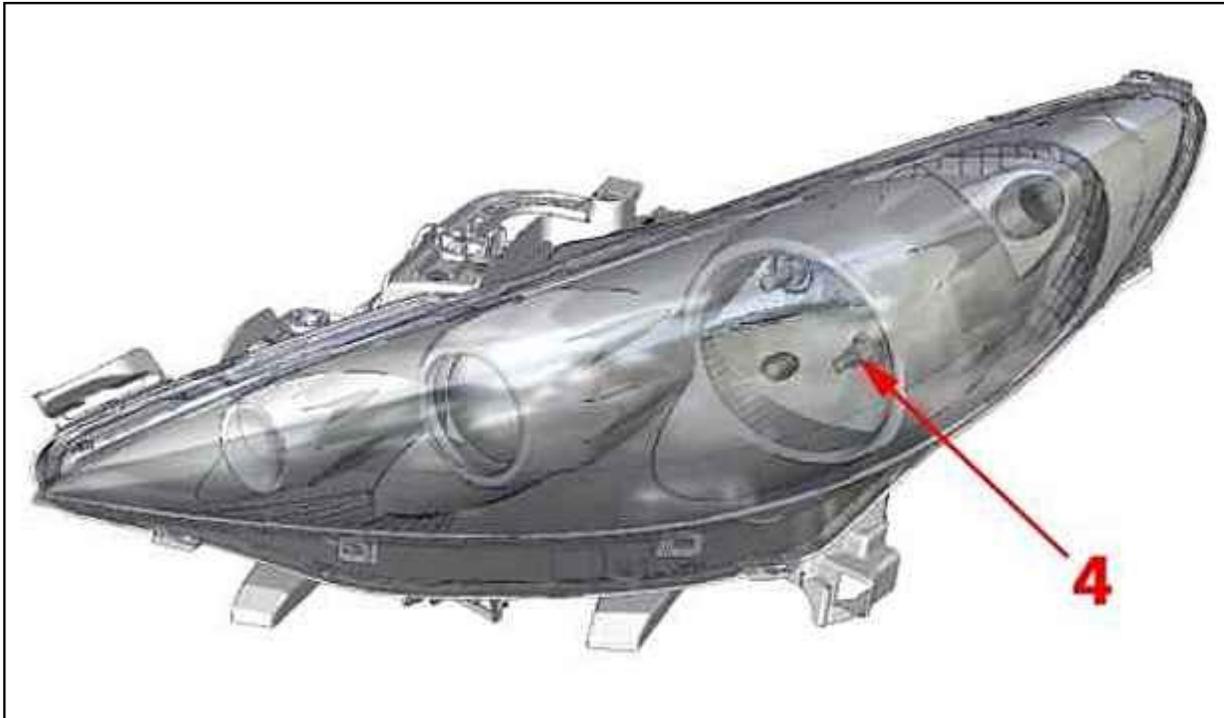


Figure : C5EK04UD

N.B. : The headlamp is fitted with lighting which is static when turning with an additional H7 bulb (4) (According to equipment) .

2. Refitting

Proceed in the reverse order to removal.

Tighten the screws (2) to 0.5 m.daN .

Check the electric operation.

Adjust the headlight ⓘ (In the event of replacement ⓘ) .