

TIGHTENING TORQUES : ENGINE/GEARBOX COUPLING

MA OR MC MANUAL GEARBOX OR GEARBOX BE4R OR GEARBOX MA PILOTE

1. Gearbox coupling (be) On engine

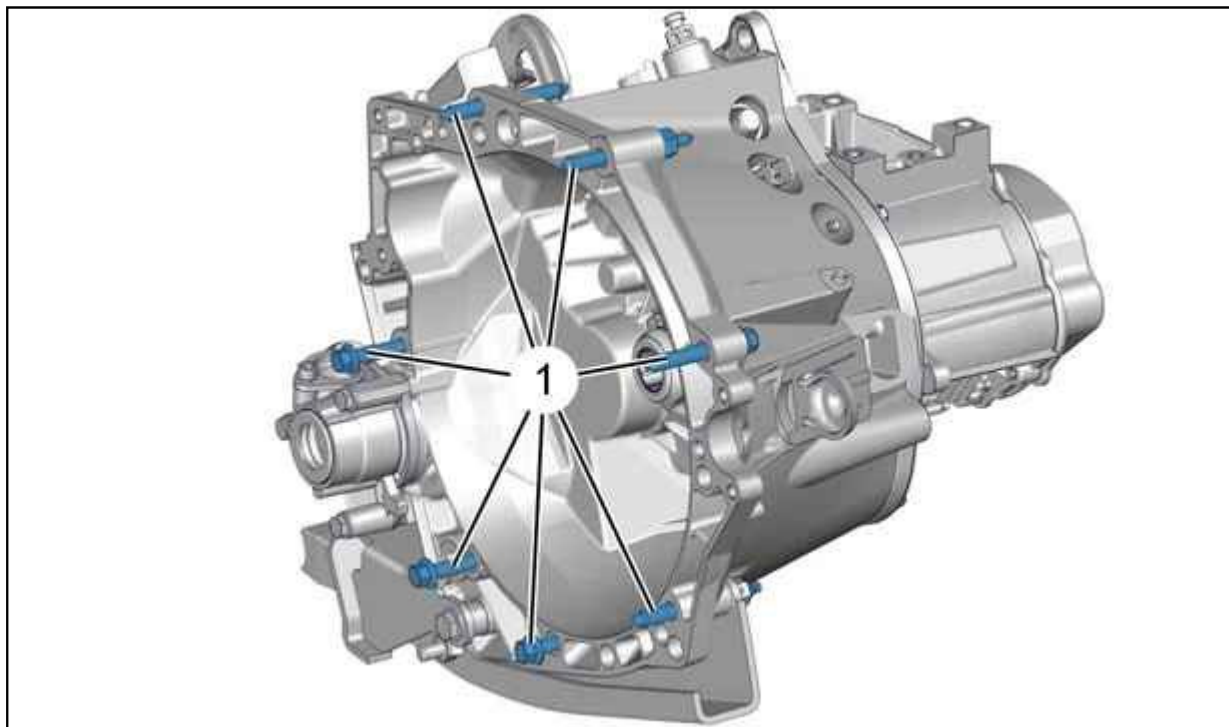


Figure : B2CB01UD

| Reference | Designation | Tightening torque |
|-----------|---------------------------|-------------------|
| (1) | Gearbox coupling - engine | 5,4 daNm |

2. Gearbox coupling (ma / MAP) On engine

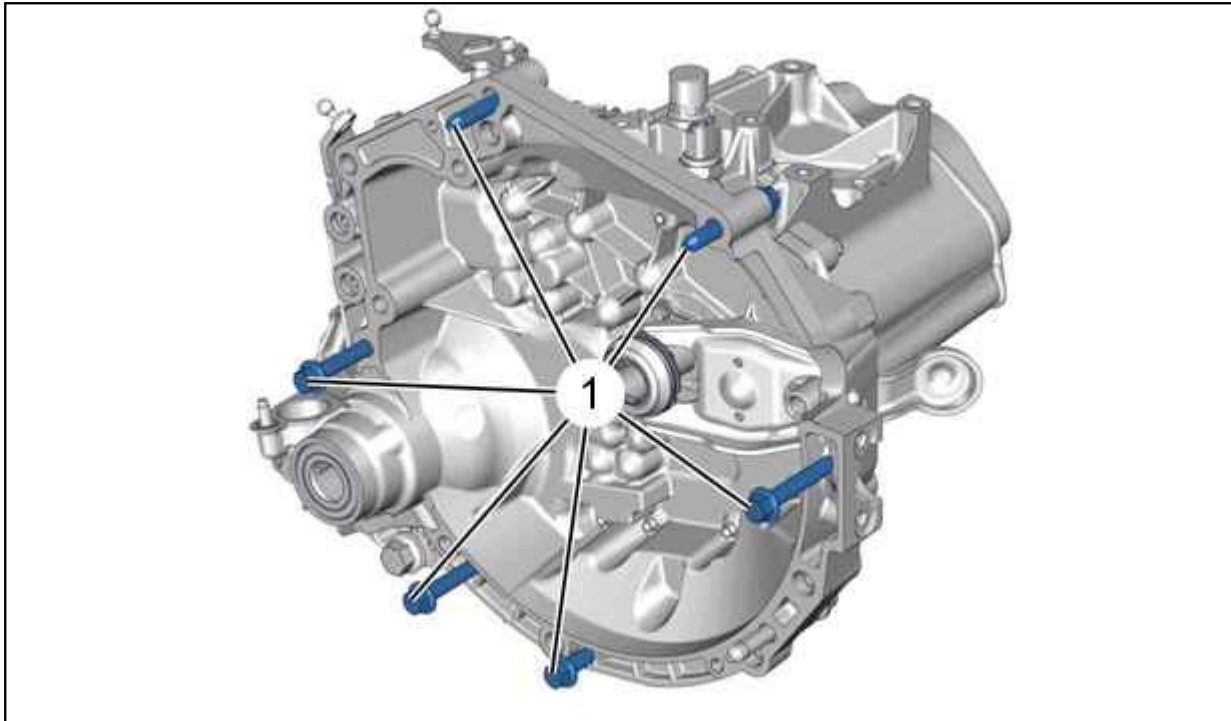


Figure : B2CB027D

| Reference | Designation | Tightening torque |
|-----------|---------------------------|-------------------|
| (1) | Gearbox coupling - engine | 5,5 daNm |

3. Gearbox coupling (Mc) On engine

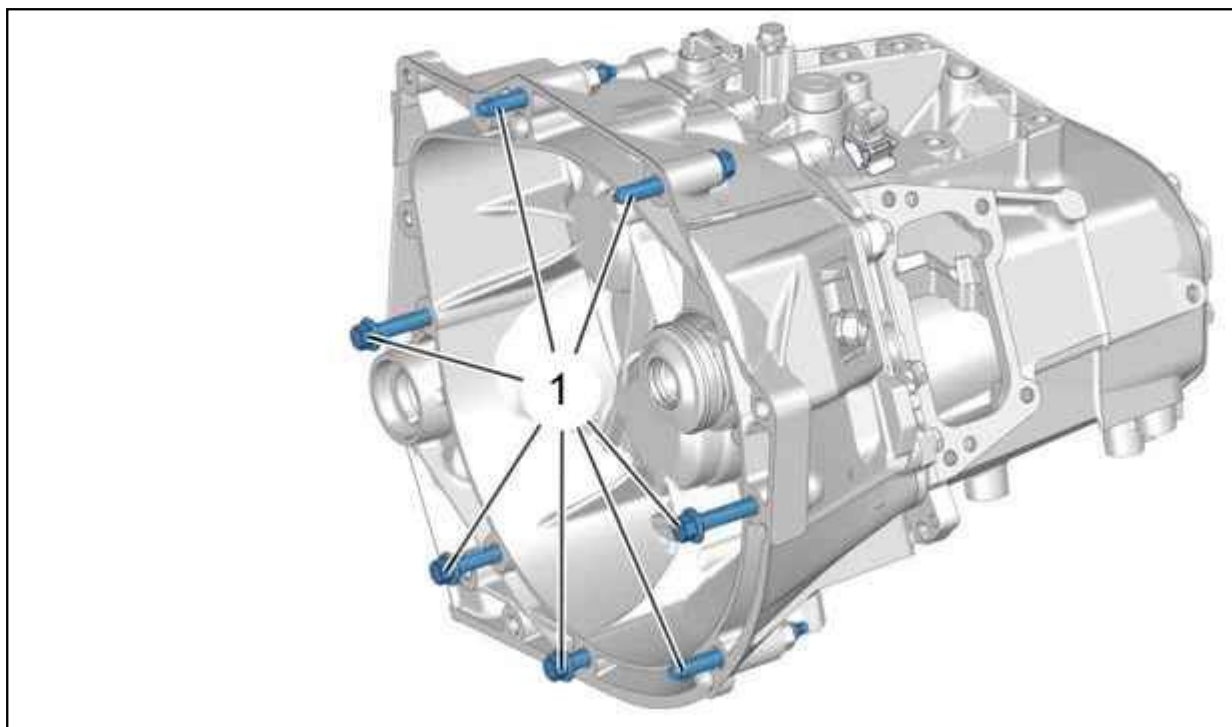


Figure : B2CB04SD

| Reference | Designation | Tightening torque |
|-----------|---------------------------|-------------------|
| (1) | Gearbox coupling - engine | 5,4 daNm |