

REMOVING - REFITTING : FRONT BUMPER

1. Removing

Place the vehicle on a two-post ramp.

Remove :

- The front wheels
- **The front splash shields** ⓘ

Open the bonnet.

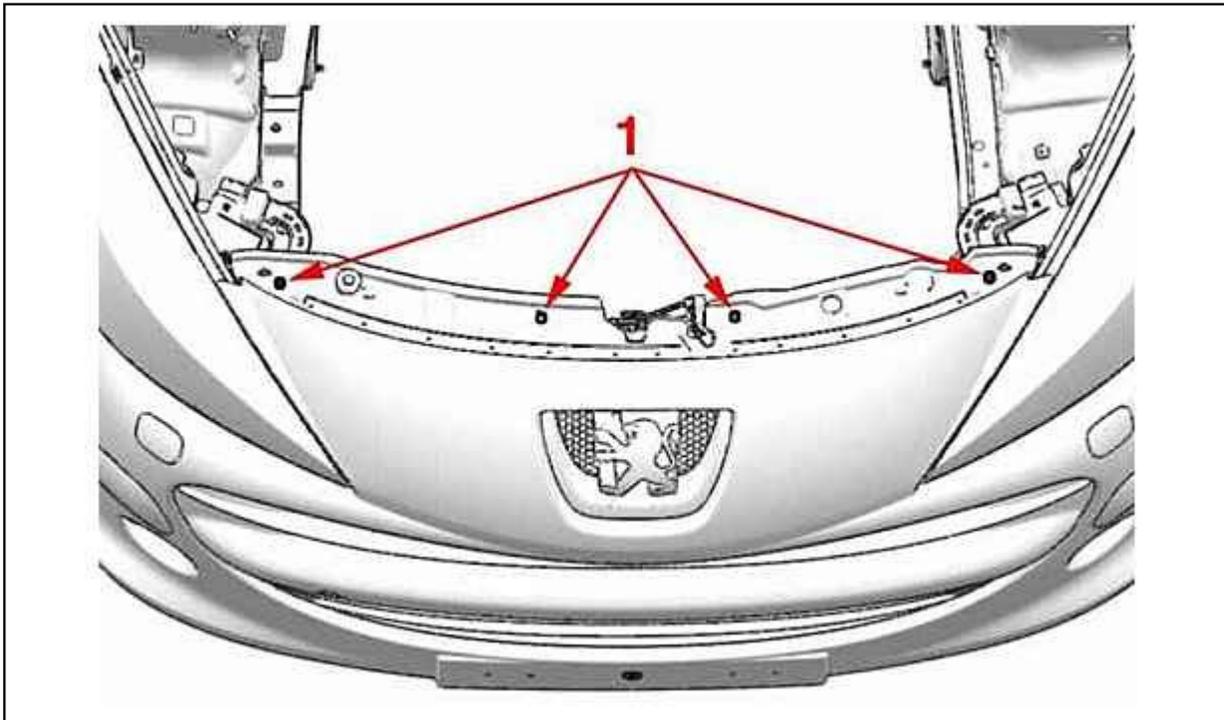


Figure : C5JK0QZD

Remove the bolts (1).

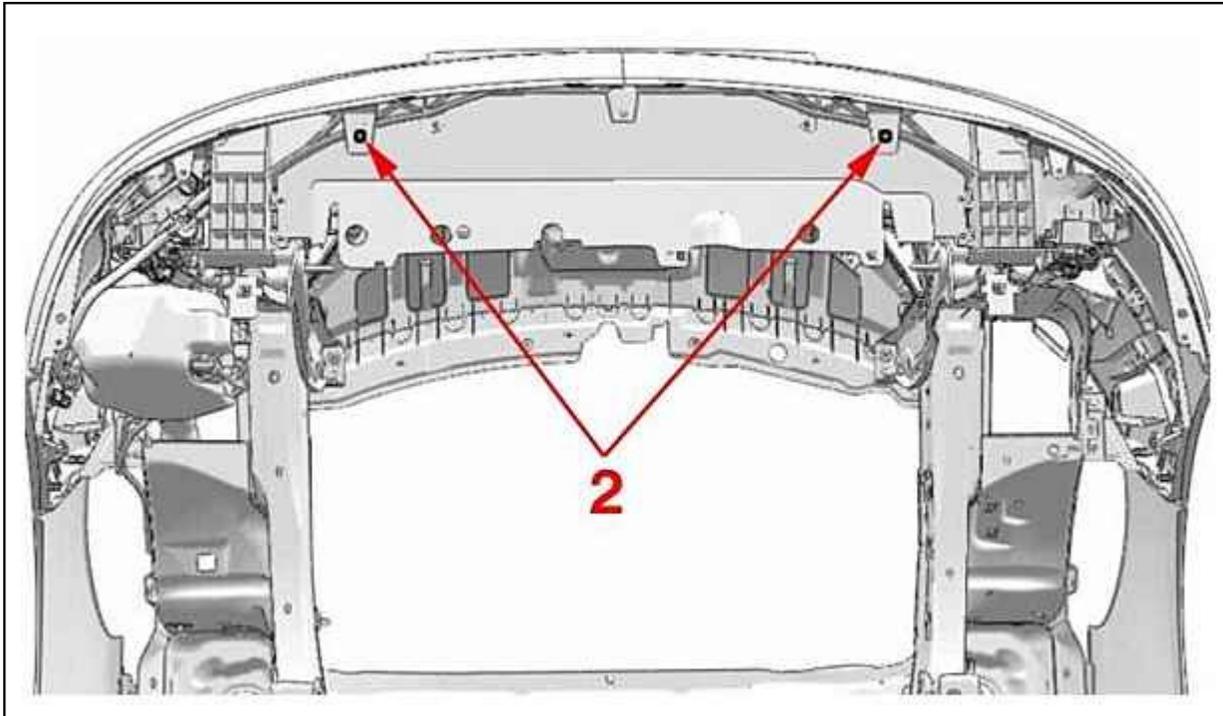


Figure : C5JK0R0D

Remove the bolts (2).

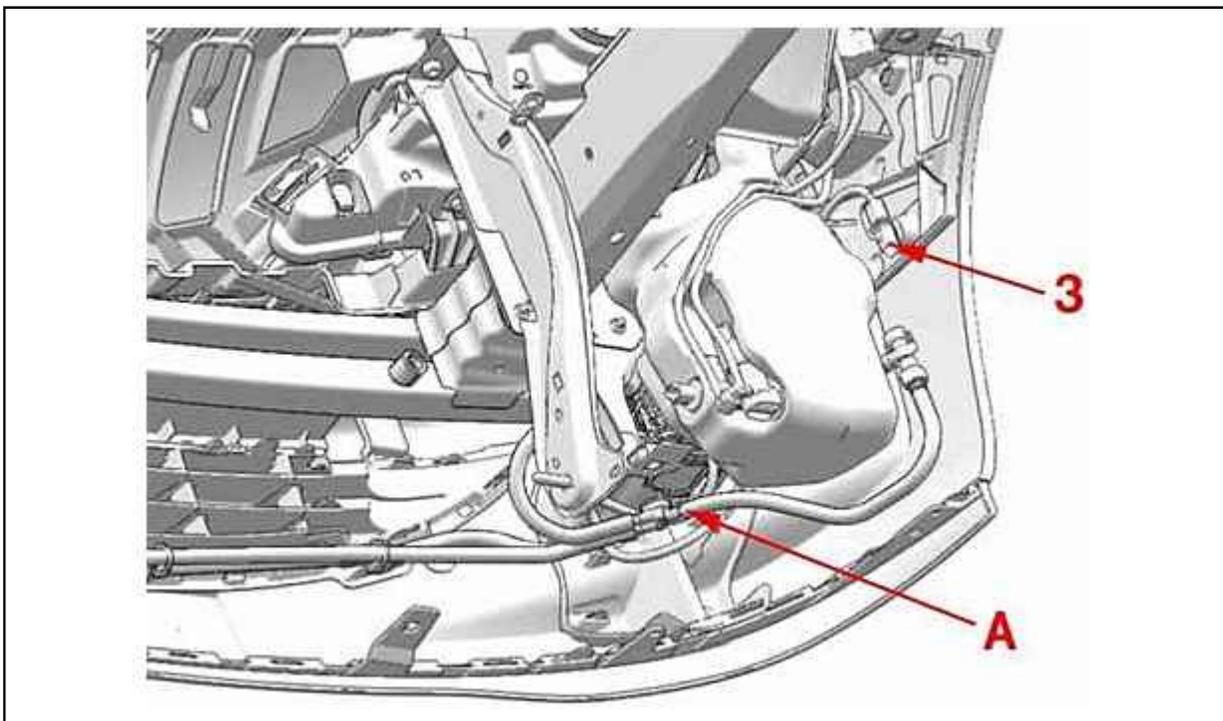


Figure : C5JK0R1D

Disconnect :

- The connector (3) (On the right-hand side)
- The fog lamp connector (On the left-hand side)

Uncouple the pipe from the headlamp washer (as (A) - According to equipment) .

N.B. : Close the headlamp washer pipe .

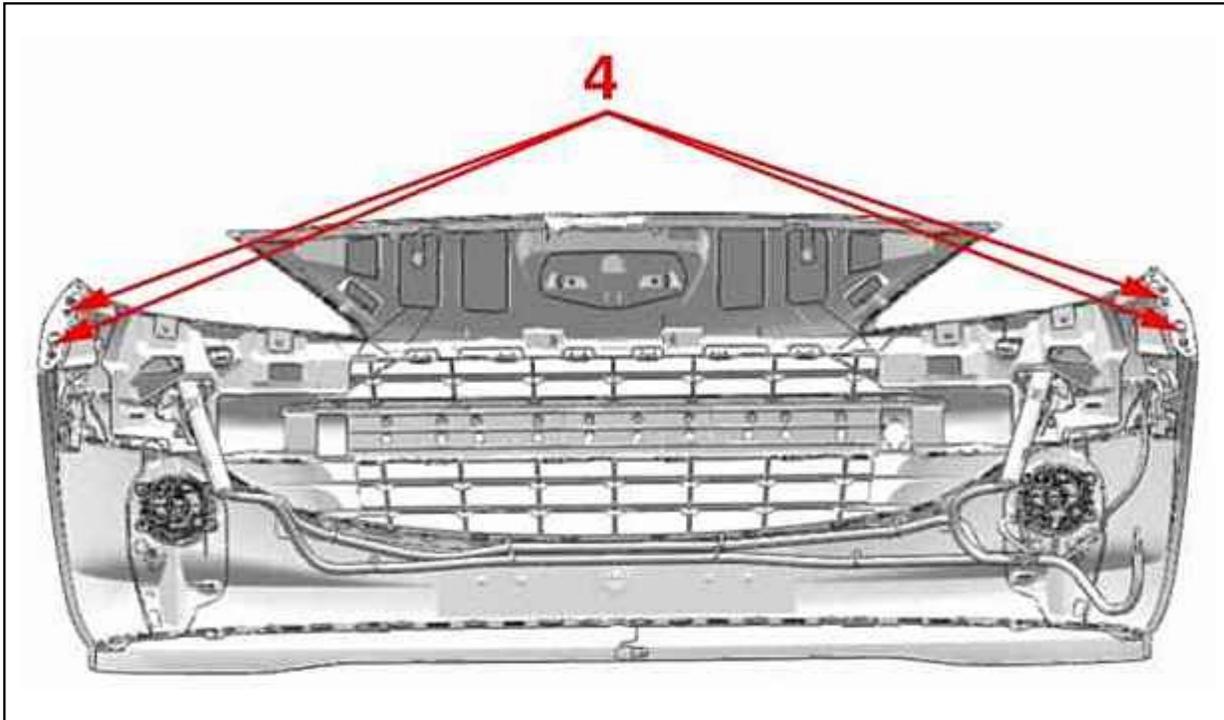


Figure : C5JK0R2D

Remove the bolts (4).
Detach and remove the front bumper .

2. Refitting

Proceed in the reverse order to removal.

Tighten :

- The bolts (1) to 0.2 da.Nm
- The bolts (2) to 0.4 da.Nm
- The bolts (4) to 0.6 da.Nm

Check the operation of the equipment.