

REMOVING - REFITTING : FUEL FILLER FLAP

1. Recommended tools

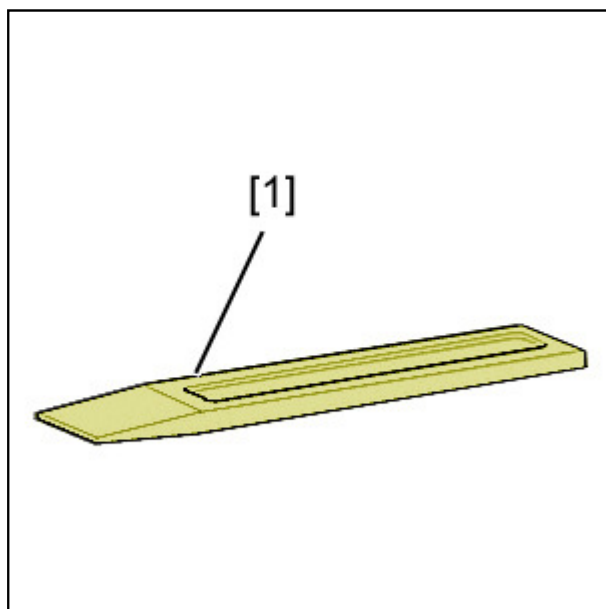


Figure : C5FK09WC

[1] Spatula (-).1350.

2. Removing

Remove the splash shield ⓘ (Left hand rear ⓘ) .

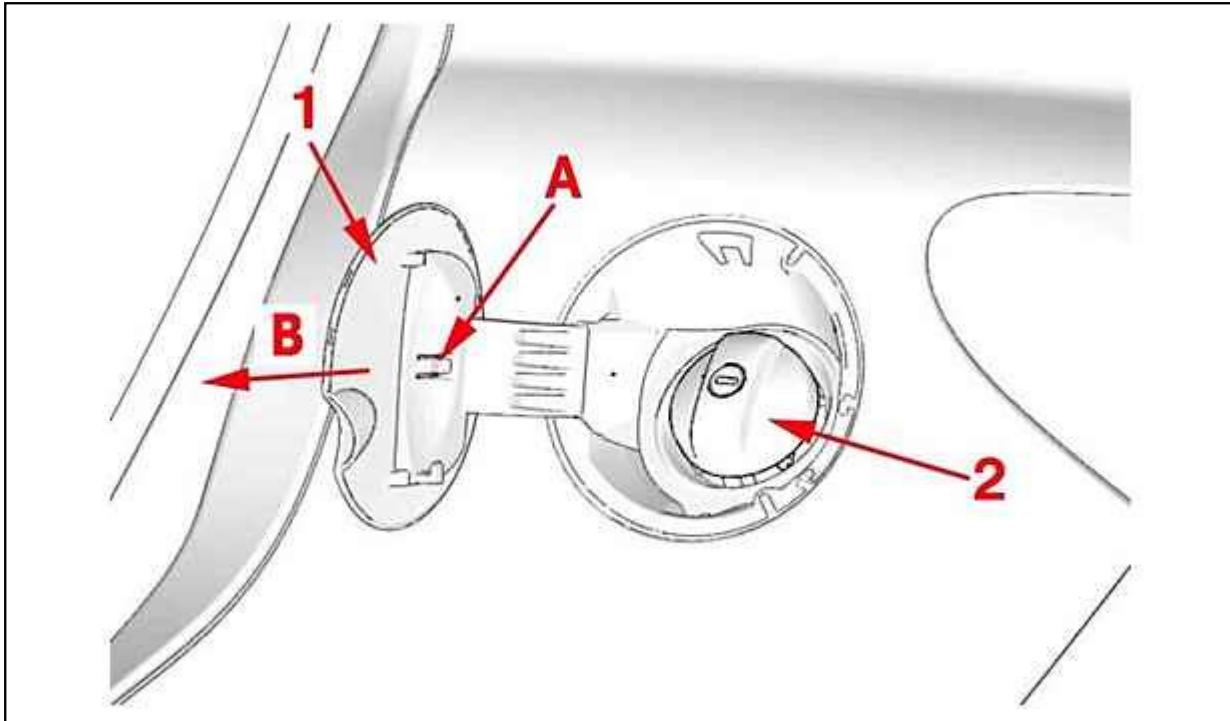


Figure : C4CK57SD

Unlock the fuel filler flap (1) cover by raising the tab at (A) using a small screwdriver and pull in the direction (B) at the same time.

Remove the reservoir cap (2).

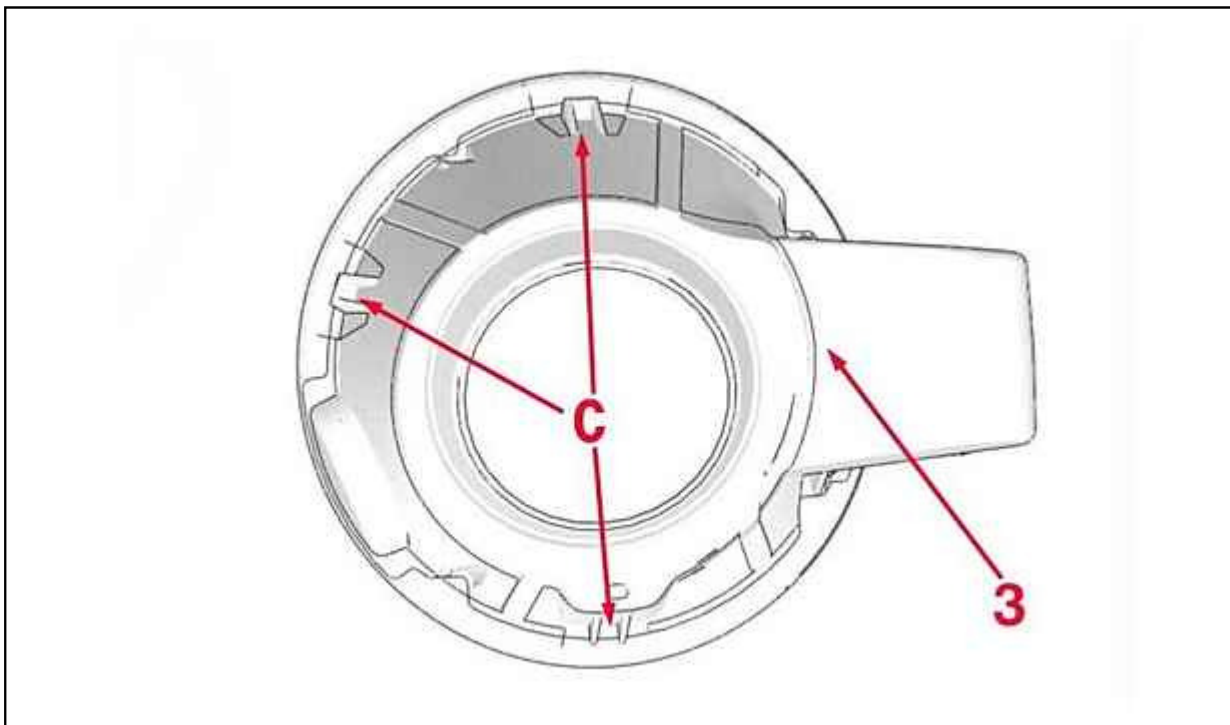


Figure : C4CK57TD

Unlock : The fuel filler flap clips (3) (as (C) - Using tool [1]) .

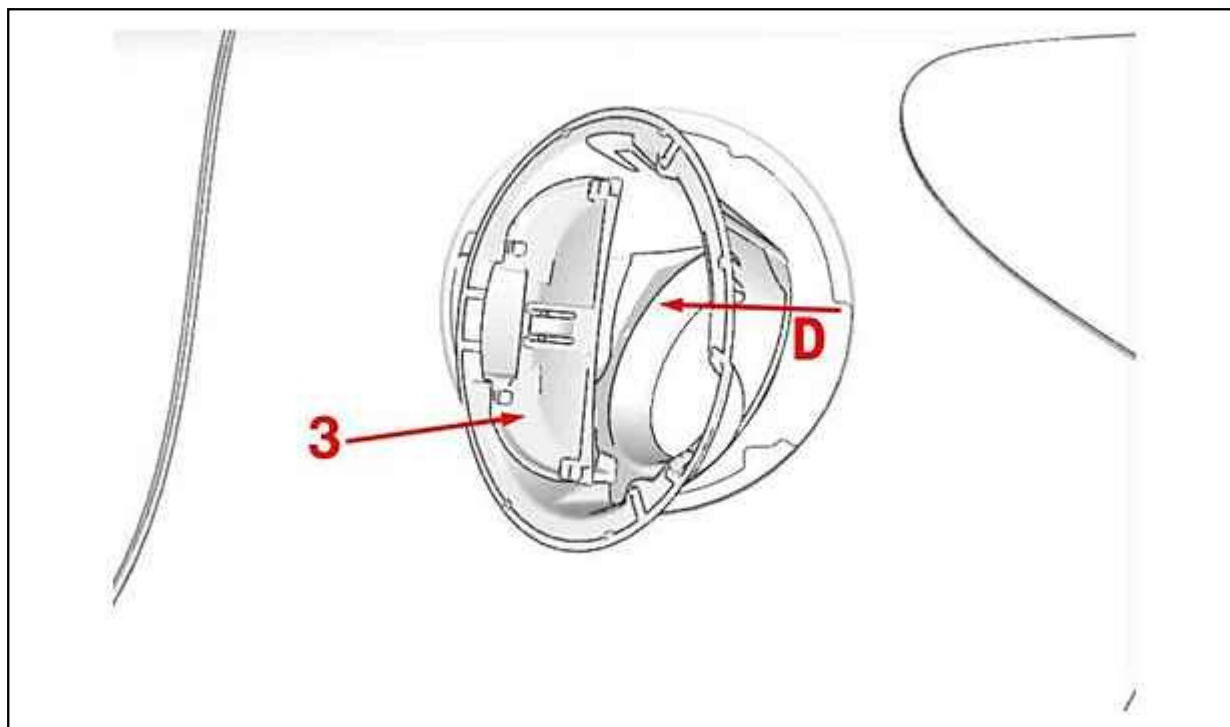


Figure : C4CK57UD

Detach : The fuel filler cap (3) (At (D)) .

Remove : The fuel filler cap (3).

3. Refitting

Proceed in the reverse order to removal.